



IQOTX30 / IQOTX31 / IQOTX32 / IQOTX33 / IQOTX34 / IQOTX35 / IQOTX36

**Fiber Optic Transmitters for
3G/HD/HD-SDI Signals**

**Operator's
Manual**

© May 2010

Snell & Wilcox Ltd., Southleigh Park House, Eastleigh Road, Havant, Hants, PO9 2PE, United Kingdom.

For General Enquiry's contact: Tel: +44 (0) 2392 489000 Fax: +44 (0)23 9245 1411

For Technical assistance contact: Tel: +44 (0) 2392 489058 Fax: +44 (0) 2392 489057

Web: <http://www.snellwilcox.com/support>


Ftp: <ftp://ftp.snellwilcox.com/support>

Contents

Module Description	1
Rear Panel Views	2
IQOTX30/34/36 Rear Panel View	2
IQOTX31/33 Rear Panel View	2
IQOTX32/35 Rear Panel View	2
Order Codes	3
Feature Summary	4
Technical Profile	5
Warnings.....	7
Notes	7
Connections.....	8
IQOTX30/34/36 Connections.....	8
IQOTX31/33 Connections.....	8
IQOTX32/35 Connections.....	9
Card Edge Controls	10
IQOTX30/34/36	10
IQOTX31/33	10
IQOTX32/35	10
Attenuation.....	11
Controlling the IQOTX3x from the RollCall	
Control Panel	12
Unit Status	12
Input.....	13
Memory 1-16.....	15
Logging	16
RollTrack.....	19
Setup	21
Operation from an Active Control Panel	23
Information Window	23
Control Window	23
Manual Revision Record.....	25


Module Description

The IQOTX3x modules are 1310nm or 1550nm fiber optic transmitters for 3G/HDTV/SD-SDI signals. The units are available in single or dual channel versions handling up to two 3G/HDTV/SD-SDI sources. Single channel versions have additional flexibility with one or two optical outputs and four reclocked electrical outputs. Suitable for applications where 3G/HDTV-SDI signals need to be transported over long distances within a facility or between sites, optical links remove the distance constraints of copper cabling at high frequency data rates such as 3Gbit/s.

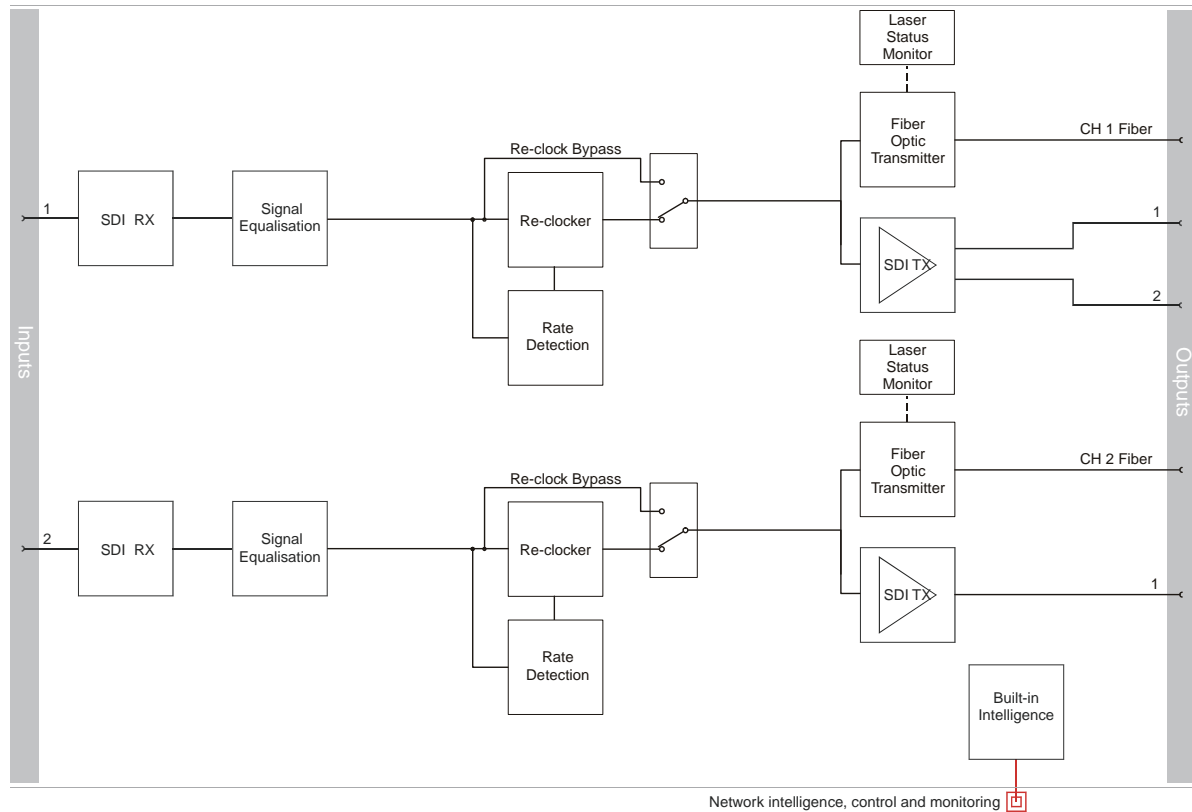


Rear Panel Views


IQOTX30/34/36 Rear Panel View

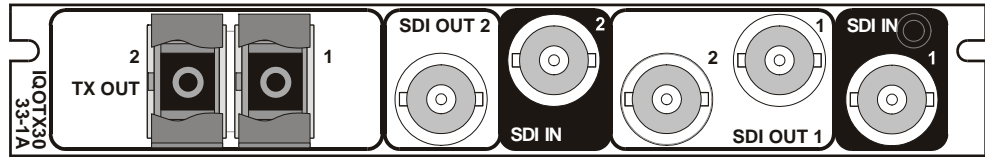

IQOTX31/33 Rear Panel View

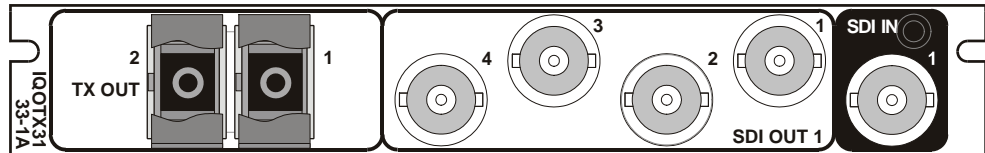

IQOTX32/35 Rear Panel View

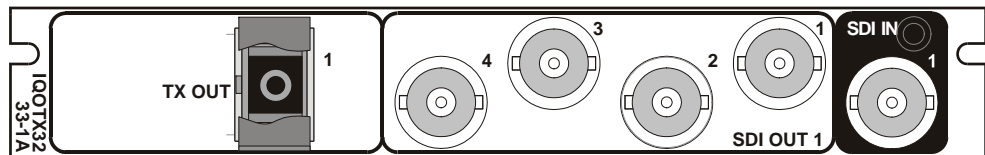


These modules can only be fitted into 'A' style enclosures as shown below.

Enclosure order codes IQH3A-S-0, IQH3A-S-P



Enclosure order codes IQH3A-E-0, IQH3A-E-P, IQH3A-0-0, IQH3A-0-P

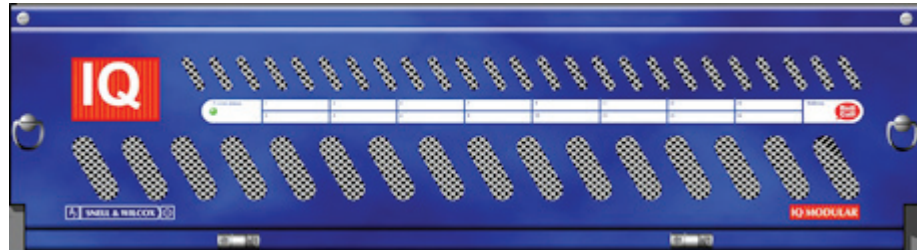

Enclosure order code IQH1A-S-P



Order Codes

IQOTX30	<i>IQOTX3033-1A</i> Dual Channel Single mode fiber optic transmitter for HD/SD-SDI. 2 x HD/SD-SDI inputs, 1x2, 1x1 HD/SD-SDI outputs, 1 x optical output per channel (1310nm/1310nm). <i>IQOTX3033-1A3</i> Dual Channel Single mode fiber optic transmitter for 3G/HD/SD-SDI. 2 x 3G/HD/SD-SDI inputs, 1x2, 1x1 3G/HD/SD-SDI outputs, 1 x optical output per channel (1310nm/1310nm). <i>IQOTX30-3G</i> Upgrade for IQOTX30 to operate with 3Gbps signals.
IQOTX31	<i>IQOTX3133-1A</i> Single mode fiber optic transmitter for HD/SD-SDI. 1 x HD/SD-SDI input, 4 x HD/SD-SDI outputs, 2 x optical output (1310nm/1310nm). <i>IQOTX3133-1A3</i> Single mode fiber optic transmitter for 3G/HD/SD-SDI. 1 x 3G/HD/SD-SDI input, 4 x 3G/HD/SD-SDI outputs, 2 x optical output (1310nm/1310nm). <i>IQOTX31-3G</i> Upgrade for IQOTX31 to operate with 3Gbps signals.
IQOTX32	<i>IQOTX3257-1A</i> Single mode fiber optic transmitter for HD/SD-SDI. 1 x HD/SD-SDI input, 4 x HD/SD-SDI outputs, 1 x optical output (1310nm). <i>IQOTX3257-1A3</i> Single mode fiber optic transmitter for 3G/HD/SD-SDI. 1 x 3G/HD/SD-SDI input, 4 x 3G/HD/SD-SDI outputs, 1 x optical output (1310nm). <i>IQOTX32-3G</i> Upgrade for IQOTX32 to operate with 3Gbps signals.
IQOTX33	<i>IQOTX3333-1A</i> Single mode fiber optic transmitter for HD/SD-SDI. 1 x HD/SD-SDI input, 4 x HD/SD-SDI outputs, 2 x optical output (1550nm/1550nm). <i>IQOTX3333-1A3</i> Single mode fiber optic transmitter for 3G/HD/SD-SDI. 1 x 3G/HD/SD-SDI input, 4 x 3G/HD/SD-SDI outputs, 2 x optical output (1550nm/1550nm). <i>IQOTX33-3G</i> Upgrade for IQOTX33 operate with 3Gbps signals

IQOTX34	<i>/QOTX3433-1A</i> Dual Channel Single mode fiber optic transmitter for HD/SD-SDI. 2 x HD/SD-SDI inputs, 1x2, 1x1 HD/SD-SDI outputs, 1 x optical output per channel (1550nm/1550nm).
	<i>/QOTX3433-1A3</i> Dual Channel Single mode fiber optic transmitter for 3G/HD/SD-SDI. 2 x 3G/HD/SD-SDI inputs, 1x2, 1x1 3G/HD/SD-SDI outputs, 1 x optical output per channel (1550nm/1550nm).
	<i>/QOTX34-3G</i> Upgrade for IQOTX34 to operate with 3Gbps signals
IQOTX35	<i>/QOTX3533-1A</i> Single mode fiber optic transmitter for HD/SD-SDI. 1 x HD/SD-SDI input, 4 x HD/SD-SDI outputs, 1 x optical output (1550nm).
	<i>/QOTX3533-1A3</i> Single mode fiber optic transmitter for 3G/HD/SD-SDI. 1 x 3G/HD/SD-SDI input, 4 x 3G/HD/SD-SDI outputs, 1 x optical output (1550nm).
	<i>/QOTX35-3G</i> Upgrade for IQOTX35 to operate with 3Gbps signals
IQOTX36	<i>/QOTX3633-1A</i> Dual Channel Single mode fiber optic transmitter for HD/SD-SDI. 2 x HD/SD-SDI inputs, 1x2, 1x1 HD/SD-SDI outputs, 1 x optical output per channel (1310nm/1550nm).
	<i>/QOTX3633-1A3</i> Dual Channel Single mode fiber optic transmitter for 3G/HD/SD-SDI. 2 x 3G/HD/SD-SDI inputs, 1x2, 1x1 3G/HD/SD-SDI outputs, 1 x optical output per channel (1310nm/1550nm).
	<i>/QOTX36-3G</i> Upgrade for IQOTX36 to operate with 3Gbps signals

Feature Summary

- Single mode fiber optic Transmitter for 3G/HD/SD-SDI and DVB ASI Signals
- Output wavelength of 1310nm/1550nm
- Active loop-through 3G/HD/SD-SDI outputs for each input in accordance with SMPTE424M, SMPTE292M, SMPTE259M and DVB ASI
- Reclocking for 3 Gbit/s, 1.5 Gbit/s HD-SDI and 270 Mbit/s SDI signals, or asynchronous operation for other frequencies (input range 50 Mbit/s to 3 Gbit/s)
- Single or dual channel versions available

Technical Profile

Inputs and Outputs

Signal Inputs

Electrical	3 GBit/s HD-SDI, 1.485 GBit/s HD-SDI or 270 Mbit/s SD-SDI (asynchronous operation available at other frequencies)
Connector / Format	BNC 75 ohm panel jack
Conforms to	SMPTE 424M (HD level A) SMPTE 292M (HD) SMPTE 259M-C (SD)
Inputs	Up to two
Input Cable Length	Up to 80m Belden 1694A @ 3 Gbit/s Up to 180m Belden 1694A @ 1.5 Gbit/s Up to 350m Belden 1694A @ 270 Mbit/s

Signal Outputs

Optical	3 GBit/s HD-SDI, 1.485 Gbit/s HD-SDI or 270 Mbit/s SD-SDI (asynchronous operation available at other frequencies)
Connector / Format	SC/PC singlemode panel uniter
Outputs	One per channel
Conforms to	SMPTE 297-2006
Electrical	3 GBit/s HD-SDI, 1.485Gbit/s HD-SDI or 270 Mbit/s SD-SDI (asynchronous operation available at other frequencies)
Connector / Format	BNC/ 75 ohm panel jack (Reclocked active loop through)
Outputs	2 reclocked active loop through for CH1 SDI Input 1 reclocked active loop through for CH2 SDI Input
Conforms to	SMPTE 424M (HD level A) SMPTE 292M (HD) SMPTE 259M-C (SD)

Controls

Card Edge Controls (also available via RollCall)

None

Functions Available via RollCall Only

Mode	Auto, 3G, HD, SD
Reclocker	On/Off
Laser Disable	On/Off

Logging	Input n Ident Input n Name Input n Type Input n State Input n SDI Bitrate Rx n Power State Rx n Power Tx n Laser Bias State Tx n Bias Current Tx n Power State Tx n Power Tx n Wavelength
	Where n is the Channel number 1 or 2
RollTrack Controls	On/Off, Index, Source, Address, Command, Status, Sending
RollTrack Outputs	Unused Input n OK Input n None Input n Bitrate 270 Input n Bitrate 1.5G Input n Bitrate 3G Rx n Power OK Rx n Power High Rx n Power Low Tx n Bias OK Tx n Bias High Tx n Bias Low

Where n is the Channel number 1 or 2

Indicators

Power	OK (Green)
CPU	OK (Green flashing)
Input 1 (2)	OK/Bypass (Green), Bypass (Orange), Loss (Red)

Specifications

Wavelength	IQOTX30/31: 1310nm/1310nm IQOTX32: 1310nm IQOTX33/34: 1550nm/1550nm IQOTX35: 1550nm IQOTX36: 1310nm/1550nm
Spectral width (FWHM)	IQOTX31/31/32: >1.5 nm (typ) IQOTX33/34/45/46: <1nm (typ)
Output Power	IQOTX30/31/32: -2 dBm (± 1 dBm) IQOTX33/34/35/36: +2 dBm (± 2 dBm)
Extinction Ratio	>7.5:1 (typ)
Transmission distance	IQOTX30/31/32: Up to 30 Km IQOTX33/34/35/36: up to 20 Km with attenuator (50 Km without attenuator)
Module Power Consumption	Single Tx 3.5W max Dual Tx 3.5W max

A rectangular label with a black border and a black background. The text "CLASS 1 LASER PRODUCT" is written in white, bold, uppercase letters.

Warnings



- All lasers used in this product are Class 1, in accordance with EN60825-1 as well as 21CFR 1040.10 and 1040.11
- Laser light can be damaging to the eyes. Optical fibers and uniteres should be handled with great care.
- The IQOTR30/31/32/33/34/35/36 is designed for use with Class 1 laser systems only. Ensure that all outputs do **not** exceed Class 1 as doing so will impair the safety of the system and may result in damage to the equipment.
- Active fibers should not be handled unless thier source can positively be identified as not exceeding Class 1 limits.

Notes

Note:


- Optical uniteres have shutters to prevent the ingress of dust. These shutters should only be opened when connecting optical fibers.
- The ends of optical fibers should be cleaned with a liquid fiber cleaner, using a cotton bud, to ensure that there is no dust present before they are plugged in (the uniter is polarized).
- Do not disturb or handle the optical fibers.
- **1550nm Tx on IQOTX33, IQOTX34, IQOTX35 and IQOTX36 Modules**
An attenuator is required for short link distances (<15km) and is fitted by default. For link distances greater than 15km, the supplied attenuator may be removed to increase power.
See "Attenuation" on page 11.

Connections

IQOTX30/34/36 Connections

Inputs

SDI input to the module is via two BNC 75 ohm panel jack connectors.

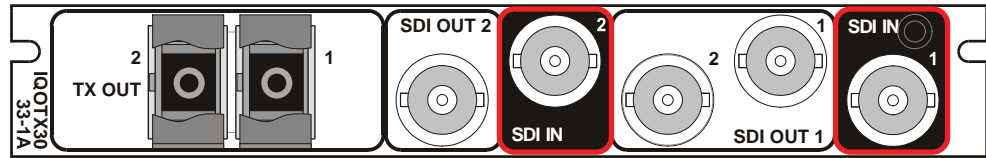


Optical Outputs

Optical output from the module is via two SC/PC singlemode panel units.

IQOTX30: Both optical outputs are 1310nm


IQOTX34: Both optical outputs are 1550nm

IQOTX36: Optical output 1 is 1310nm and optical output 2 is 1550nm

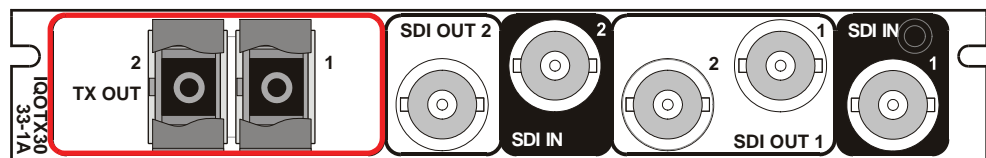

Electrical Outputs


SDI output from the module is via BNC 75 ohm panel jack connectors. There are two outputs on Channel 1 and a single output on Channel 2.

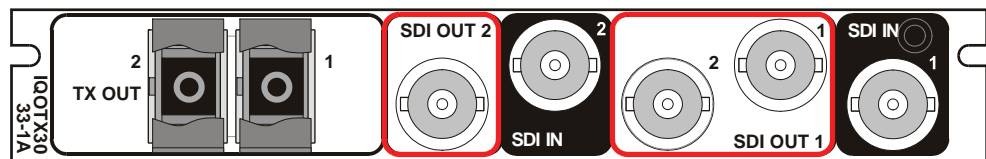

IQOTX31/33 Connections

Input

SDI input to the module is via a single BNC 75 ohm panel jack connector.

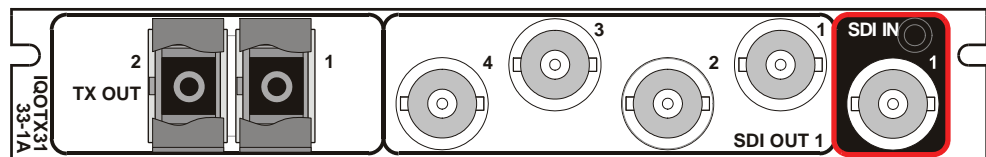


Optical Outputs

Optical output from the module is via two SC/PC singlemode panel units.


IQOTX31: Both optical outputs are 1310nm

IQOTX33: Both optical outputs are 1550nm

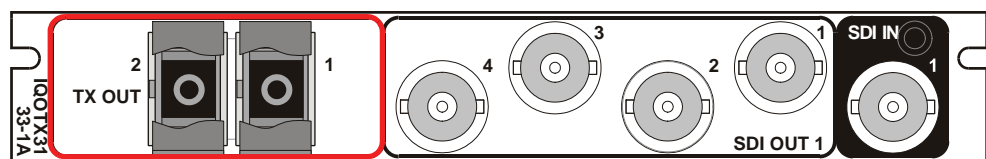

Electrical Outputs


SDI output from the module is via four BNC 75 ohm panel jack connectors.

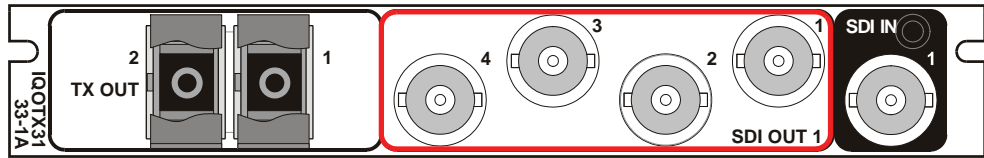

IQOTX32/35 Connections

Input

SDI input to the module is via a single BNC 75 ohm panel jack connector.

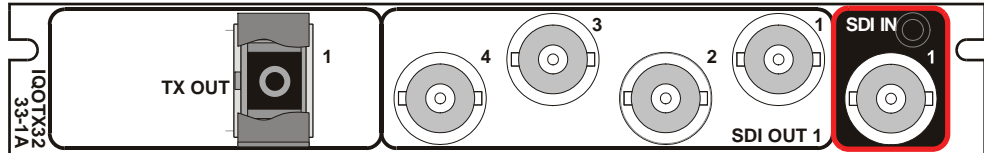


Optical Output

Optical output from the unit is via a single SC/PC singlemode panel uniter


IQOTX32: 1310nm

IQOTX35: 1550nm.

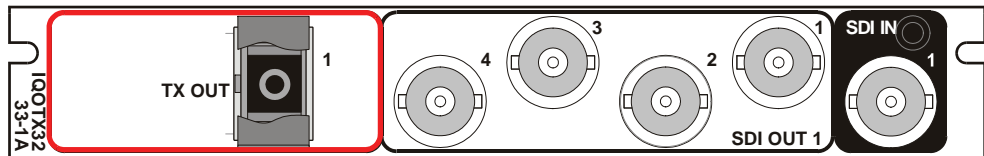


Electrical Outputs

SDI output from the module is via four BNC 75 ohm panel jack connectors.

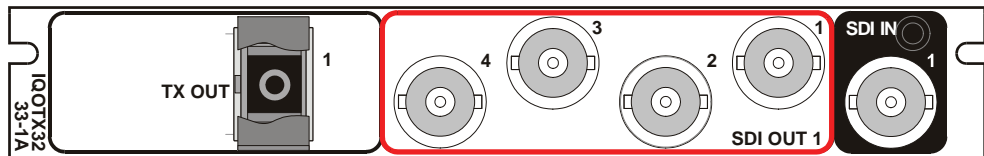


Card Edge Controls


IQOTX30/34/36

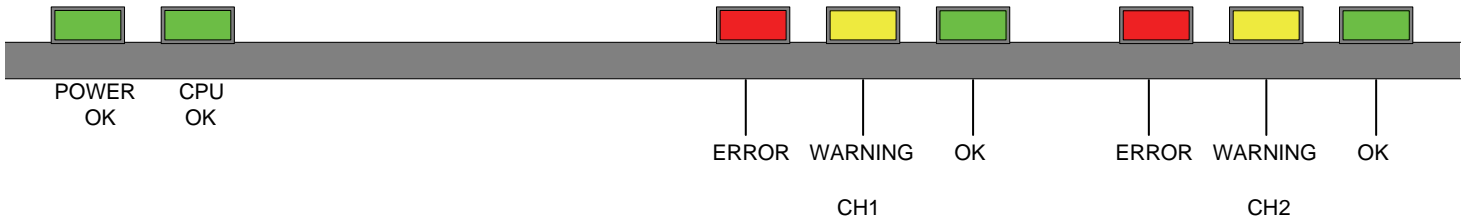

IQOTX31/33

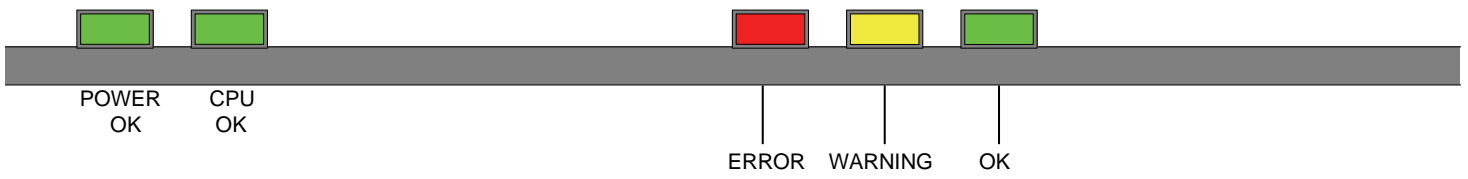


IQOTX32/35

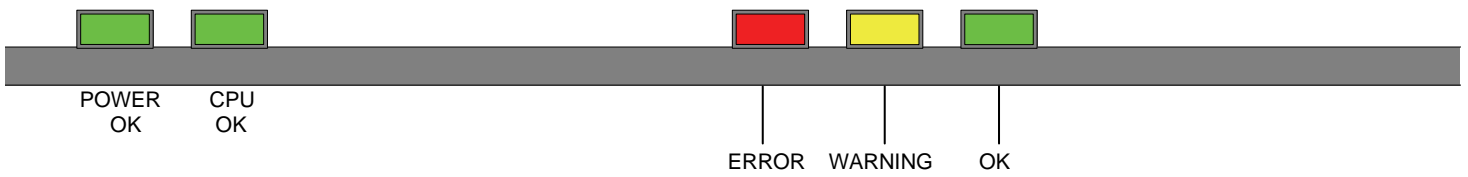

Attenuation

The IQOTX33/34/35/36 modules have 1550nm transmission lasers, which have a higher optical power output than the 1310nm variety present on the IQOTX30/31/32 modules. For link distances less than 15Km, this power is sufficient to saturate receivers. As a precaution, all units with 1550nm transmission lasers are fitted with a 5dBm attenuator. For distances greater than 15Km, it may be desirable to use the extra optical power, in which case the attenuator can be removed.

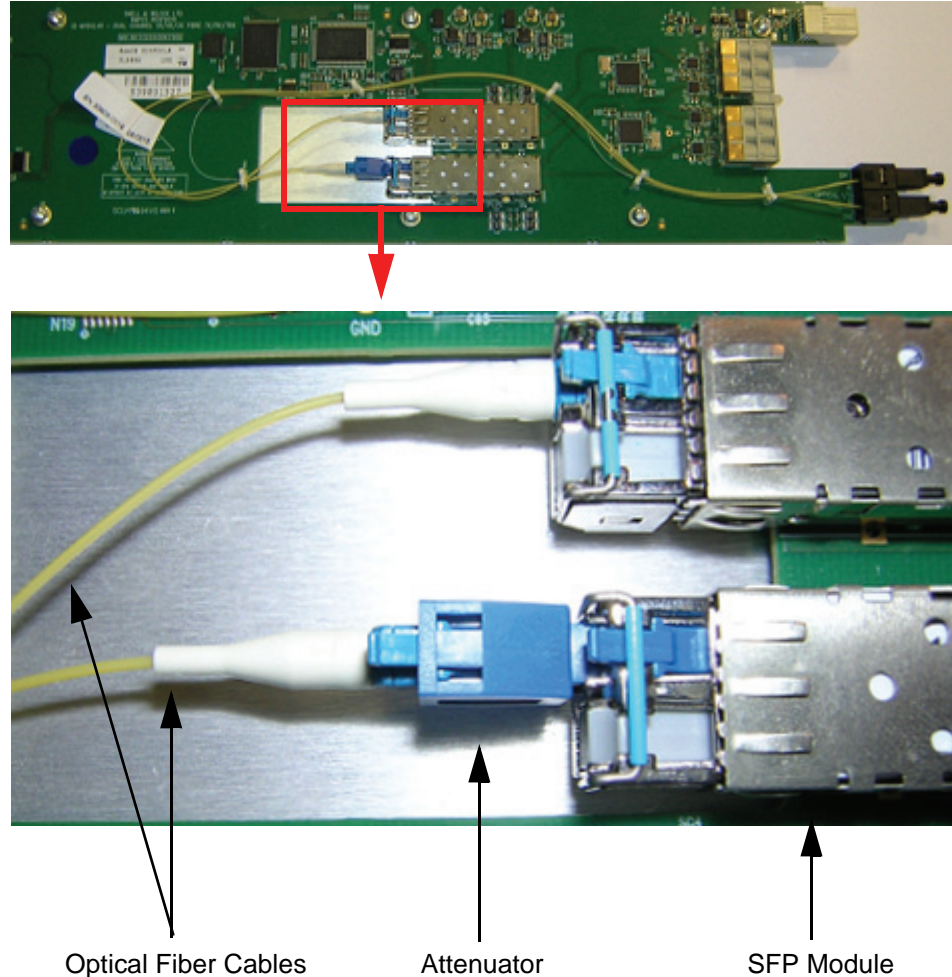

To remove the attenuator:

1. Remove the card from the IQ enclosure.
2. Press down on the blue latch that holds the optical fiber connector in place and withdraw the optical fiber.
3. Press down on the blue latch that holds the attenuator in place and remove/withdraw the attenuator from the SFP module.
4. Push the optical fiber connector directly into the SFP module. It will click when it is in place.
5. Refit the card into the IQ enclosure.


Note:

Take care not to touch the exposed glass tip of the optical fiber. If this does happen, clean the exposed tip with an isopropyl alcohol wipe.

Controlling the IQOTX3x from the RollCall Control Panel

Unit Status

Information about the status of the unit is displayed in the Unit Status section on each RollCall Control Panel screen.

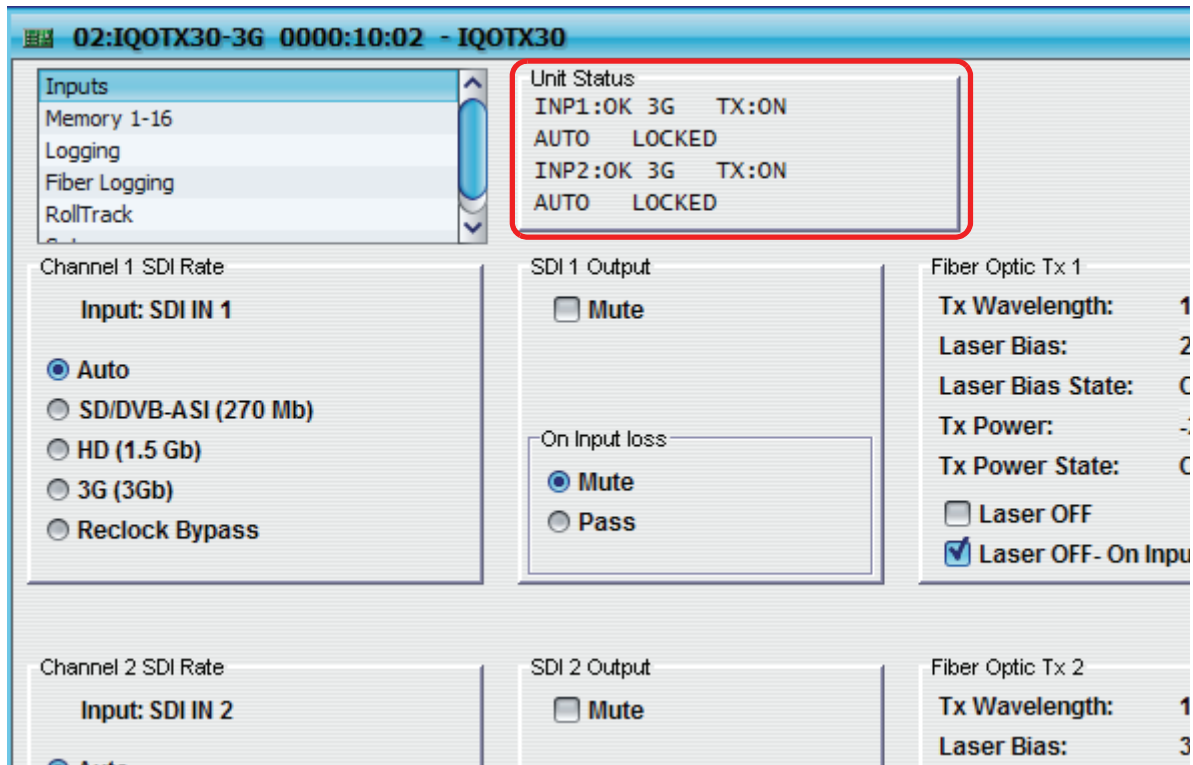

The first two lines of the Unit Status display the input status, detected rate, and input selection method for Input 1.

The third and fourth lines of the Unit Status display the same information for Input 2.

Input

The input screen enables the type of input signal to be selected.

The screenshot displays the configuration interface for the IQOTX30-3G unit. The top status bar shows '02:IQOTX30-3G 0000:10:02 - IQOTX30'. The left sidebar lists 'Inputs' as the active menu item. The main configuration area is organized into three columns:

- Channel 1 SDI Rate:** Shows 'Input: SDI IN 1' and radio button options for 'Auto' (selected), 'SD/DVB-ASI (270 Mb)', 'HD (1.5 Gb)', '3G (3Gb)', and 'Reclock Bypass'.
- SDI 1 Output:** Includes a 'Mute' checkbox (unchecked) and 'On Input loss' options: 'Mute' (selected) and 'Pass'.
- Fiber Optic Tx 1:** Displays 'Tx Wavelength: 1310nm', 'Laser Bias: 28.5mA', 'Laser Bias State: OK', 'Tx Power: -2.0dBm', and 'Tx Power State: OK'. It also has 'Laser OFF' (unchecked) and 'Laser OFF - On Input Error' (checked) options.

Channel 2 and Fiber Optic Tx 2 settings are identical in structure to Channel 1 and Tx 1, with 'Laser Bias: 34.3mA' and 'Tx Power: -1.8dBm' for Tx 2.

Input 1 SDI Rate (SDI IN 1)

- Auto:** When selected, the unit will automatically detect and reclock any valid input signal, and the detected rate will be displayed in the Unit Status. If anything else is detected, the output will not be reclocked. If the **On Input Loss / Mute** option is selected, the output will be muted; or, if the **On Input Loss / Pass** option is selected, the output will be passed through.
- SD/DVB-ASI (270 Mb):** When selected, the unit will reclock only SD/DVB-ASI (270 Mb) signals. When selected, the **On Input Loss** controls are greyed out and are inactive. If any other standard is applied to the unit, the output will be muted.
- HD (1.5 Gb):** When selected, the unit will reclock only HD (1.5 Gb) signals. When selected, the **On Input Loss** controls are greyed out and are inactive. If any other standard is applied to the unit, the output will be muted.
- 3G (3 Gb):** When selected, the unit will reclock only 3G (3 Gb) signals. When selected, the **On Input Loss** controls are greyed out and are inactive. If any other standard is applied to the unit, the output will be muted.

- **Reclock Bypass:** When selected, the unit will not reclock the input signal. If a supported rate is detected, the Unit Status will display the detected rate, otherwise, *** will be displayed.

If the **On Input Loss / Mute** option is selected, the output will be muted whenever a recognized rate is not detected; or, if the **On Input Loss / Pass** option is selected, any signal standard, frequency, etc... will pass through.

Output 1

- **Mute:** When selected, this option applies a mute on Output 1.
- **On Input loss / Mute:** When selected, if the Input signal is lost, the output signal will be muted.
- **On Input loss / Pass:** When selected, if the input signal is lost, it will be passed unchanged.

Note:

These controls only apply to the SDI outputs on the BNC. The laser output is controlled by the Laser OFF and Laser OFF - On Input Loss controls.

Input 2 SDI Rate and Output 2 (IQORX30 only)

These options are the same as the Input 1 SDI Rate and Output 1 options but are applied to Input 2 and Output 2.

Fiber Optic Tx 1 / Tx 2

The Fiber Optic Tx 1 and Fiber Optic Tx 2 areas display information about fiber optic transmission and provide options to disable the laser. The information displayed is:

- Tx Wavelength
- Laser Bias
- Laser Bias State
- Tx Power
- Tx Power State

This information is also recorded by the module's log functions.

- **Laser OFF:** Selecting this option disables the laser and fiber optic transmission.
- **Laser OFF - On Input Loss;** Selecting this option disables the laser and fiber optic transmission if the input is lost.

Note:


These controls only apply to the fiber optic output signal. The SDI outputs on the BNC are controlled by the Mute and On Input Loss - Mute controls.

*When the unit is forced to a particular standard, the laser controls are not grayed out and the laser will still be active if an incorrect standard is applied unless **Laser OFF - On Input Loss** is selected.*

Memory 1-16

Use the Memory function to save up to 16 setups to be recalled later.

Default memory names can be changed to provide more meaningful descriptions.

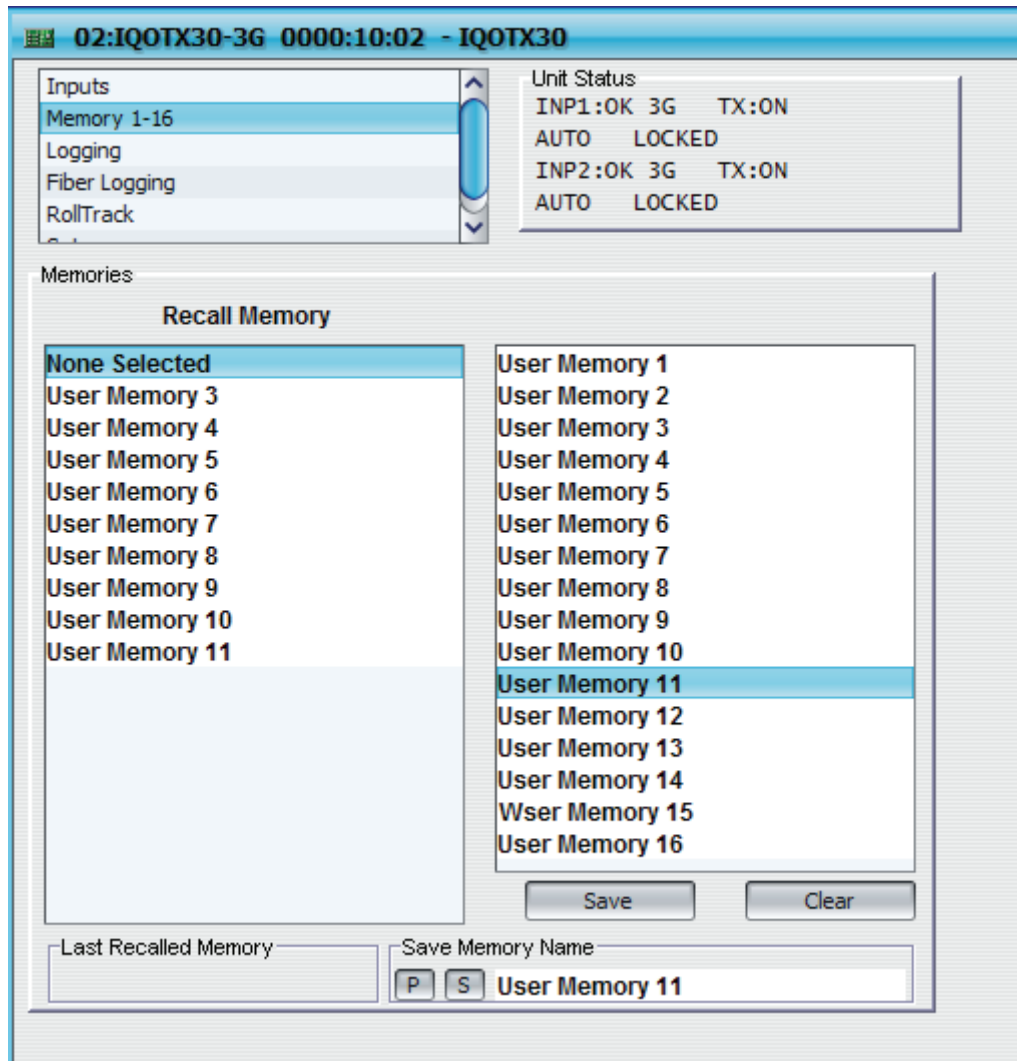

To save settings:

- In the **Save Memory** column, select a memory location, and then click **Save**. The current settings are saved and the memory appears in the **Recall Memory** column.

To change a memory name:

- In the **Save Memory Name** field, type the new memory name, and then click **S**. To return the memory to its default value, click the preset button (**P**).

Use the **Recall Memory** function to recall the settings saved in a memory location. **Last Recalled Memory** displays the most recently recalled memory. An asterisk next to the name displayed in the Last Recalled Memory field indicates that one or more controls have been changed since the memory was recalled.

To recall a memory:

- In the **Recall Memory** column, select the memory to recall. The recalled settings will be applied and the memory name will appear in the **Last Recalled Memory** section.

Logging

Information about several parameters can be made available to a logging device that is connected to the RollCall network.

02:IQOTX30-3G 0000:10:02 - IQOTX30

<div style="border: 1px solid gray; padding: 2px;"> <input type="checkbox"/> Inputs <input type="checkbox"/> Memory 1-16 <input checked="" type="checkbox"/> Logging <input type="checkbox"/> Fiber Logging <input type="checkbox"/> RollTrack </div>	<div style="border: 1px solid gray; padding: 2px;"> Unit Status INP1:OK 3G TX:ON AUTO LOCKED INP2:OK 3G TX:ON AUTO LOCKED </div>
--	--

Logging Misc		
Log Enable	Log Field	Log Value
<input checked="" type="checkbox"/> OS Version	SN=	S39012133
<input checked="" type="checkbox"/> Build No.	OS_VERSION=	V115 Release
<input checked="" type="checkbox"/> Hardware Ver.	BUILD_NUMBER=	0000300924
<input checked="" type="checkbox"/> Up Time	HARDWARE_VERSION=	RD3FDC1X
<input checked="" type="checkbox"/> Licensed Options	UPTIME=	000:00:12:00
	LICENSED_OPTIONS=	SDHD;3G

Logging Input 1		
Log Enable	Log Field	Log Value
<input checked="" type="checkbox"/> Input Ident	INPUT_1_IDENT=	SDI IN 1
<input checked="" type="checkbox"/> Input Name	INPUT_1_NAME=	TX 1
<input checked="" type="checkbox"/> Input Type	INPUT_1_TYPE=	HD/SD/3G SDI
<input checked="" type="checkbox"/> Input State	INPUT_1_STATE=	OK
<input checked="" type="checkbox"/> Input SDI Bitrate	INPUT_1_SDIRATE=	3.0Gb/s

Logging Input 2		
Log Enable	Log Field	Log Value
<input checked="" type="checkbox"/> Input Ident	INPUT_2_IDENT=	SDI IN 2
<input checked="" type="checkbox"/> Input Name	INPUT_2_NAME=	RX 2
<input checked="" type="checkbox"/> Input Type	INPUT_2_TYPE=	HD/SD/3G SDI
<input checked="" type="checkbox"/> Input State	INPUT_2_STATE=	OK
<input checked="" type="checkbox"/> Input SDI Bitrate	INPUT_2_SDIRATE=	3.0Gb/s

02:IQOTX30-3G 0000:10:02 - IQOTX30

Memory 1-16
Logging
Fiber Logging
RollTrack
Setup

Unit Status
INP1:OK 3G TX:ON
AUTO LOCKED
INP2:OK 3G TX:ON
AUTO LOCKED

Logging Output Tx 1

Log Enable	Log Field	Log Value
<input checked="" type="checkbox"/> Laser Bias State	OUTPUT_1_LASER_BIAS_STATE=	OK
<input checked="" type="checkbox"/> Laser Bias Current	OUTPUT_1_LASER_BIAS=	28.6mA
<input checked="" type="checkbox"/> Tx Power State	OUTPUT_1_TX_POWER_STATE=	OK
<input checked="" type="checkbox"/> Tx Power	OUTPUT_1_TX_POWER=	-2.1dBm
<input checked="" type="checkbox"/> Wavelength	OUTPUT_1_WAVELENGTH=	1310nm

Logging Output Tx 2

Log Enable	Log Field	Log Value
<input checked="" type="checkbox"/> Laser Bias State	OUTPUT_2_LASER_BIAS_STATE=	OK
<input checked="" type="checkbox"/> Laser Bias Current	OUTPUT_2_LASER_BIAS=	34.3mA
<input checked="" type="checkbox"/> Tx Power State	OUTPUT_2_TX_POWER_STATE=	OK
<input checked="" type="checkbox"/> Tx Power	OUTPUT_2_TX_POWER=	-1.8dBm
<input checked="" type="checkbox"/> Wavelength	OUTPUT_2_WAVELENGTH=	1310nm

Each logging screen comprises three columns:

- **Log Enable:** Select the check boxes that correspond to the parameters for which log information should be collected.
- **Log Field:** Displays the name of the logging field.
- **Log Value:** Displays the current log value.

RollCall Log Fields

Log Field	Log Value
SN=	<Serial number>
OS_VERSION=	<Operating system version>
BUILD_NUMBER=	<Software build number>
HARDWARE_VERSION=	<Hardware version number>
UPTIME=	<Time since last restart>
LICENSED_OPTIONS=	<Currently licensed options>
INPUT_N_IDENT=	<Input ident>
INPUT_N_NAME=	<Input name>
INPUT_N_TYPE=	<Input type>
INPUT_N_STATE=	OK, WARN, FAIL
INPUT_N_SDIRATE=	<Input bitrate>
OUTPUT_N_LASER_BIAS_STATE=	OK, WARN, FAIL


OUTPUT_N_LASER_BIAS=	<Laser Bias in mA>
OUTPUT_N_TX_POWER_STATE=	OK, WARN, FAIL
OUTPUT_N_TX_POWER=	<Tx power measurement>
OUTPUT_N_WAVELENGTH=	<Output wavelength in nm>

RollTrack

The RollTrack settings allow information to be sent, by means of the RollCall network, to other compatible units on the same network.

Use the settings on the **RollTrack** screen to:

- Enable or disable the RollTrack functions.
- Configure up to 16 RollTrack outputs.
- Specify the conditions that trigger RollTrack data transmission.
- Set RollTrack destinations.
- Specify the RollTrack commands to be sent.

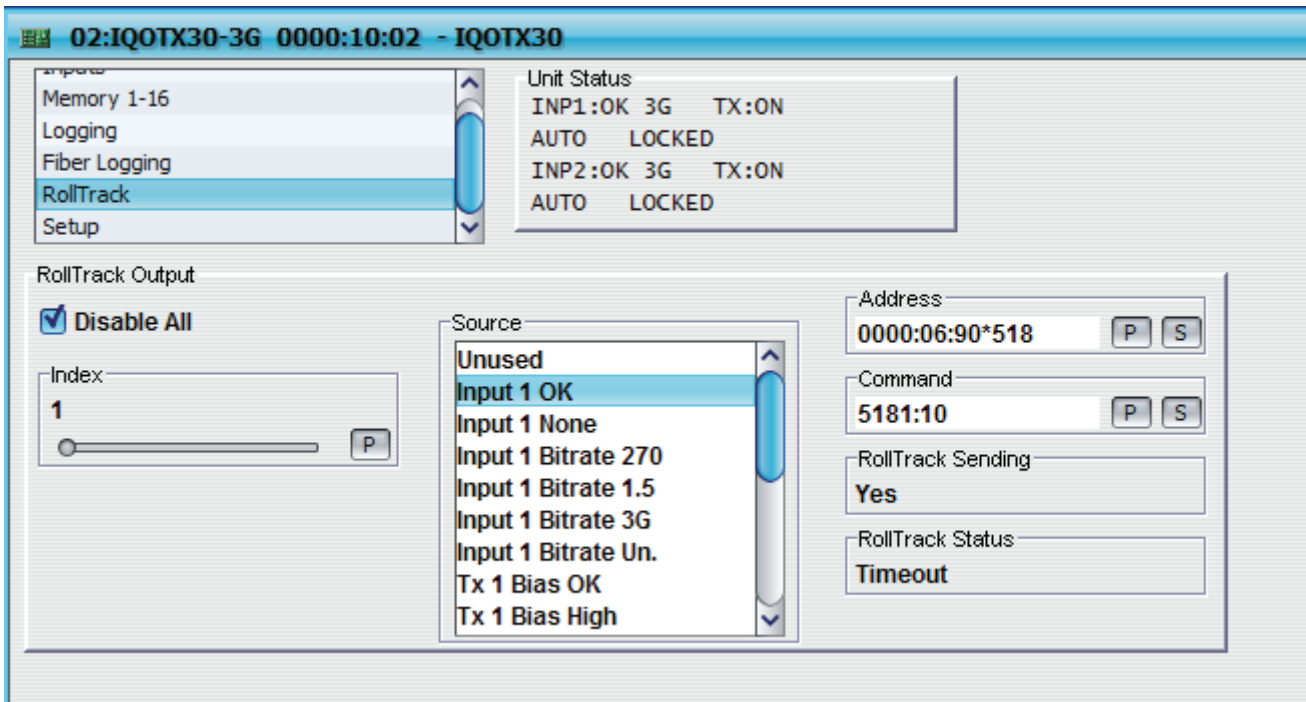

RollTrack Sources

The RollTrack Source specifies the source of the information that triggers the transmission of data.

RollTrack Addresses

The full RollTrack Address comprises four sets of numbers. For example, 0000:10:01*99.

The first set, 0000 in the example, is the network segment code number.

The second set, 10 in the example, identifies the (enclosure/mainframe) unit.

The third set, 01 in the example, identifies the slot number in the unit.

The fourth set, 99 in the example, is the RollCall ID of the destination unit - a user-configured number that uniquely identifies the destination unit in a multi-unit system. If it is set to anything other than 00, the unit will respond to RollCall commands. If left at 00, an incorrectly fitted unit may respond inappropriately.

RollTrack Commands

Each RollTrack command comprises two sets of numbers, for example, 33039:3.

The first set, 33039 in the example, is the RollTrack command number, which identifies the command.

The second set, 3 in the example, is the value that is sent with the command.

Using RollTracks

To enable or disable RollTrack functions:

- To enable the RollTrack functions, clear the **Disable All** check box.

- To disable RollTrack functions, select the **Disable All** check box.

To configure a RollTrack action:

1. Select the **Index** number. This identifies the RollTrack action being configured. Up to 16 RollTrack actions can be created.
2. From the **Source** list, select the source of the information that will trigger RollTrack transmission.
3. Enter the RollTrack **Address** and click **S**. To return the address to its default value, click the preset button (**P**).
4. Enter the RollTrack **Command** and click **S**. To return the value to its default, click the preset button (**P**).

Viewing RollTrack Information

RollTrack Sending and **RollTrack Status** display information about the status of RollTracks.

RollTrack Sending displays the information when the unit is actively sending a RollTrack command:

- **No**: The command is not being sent.
- **Yes**: The command is being sent.

RollTrack Status displays the status of the currently selected RollTrack Index:

- **OK**: RollTrack message sent and received OK.
- **Unknown**: RollTrack message has been sent but has not yet completed.
- **Timeout**: RollTrack message sent, but acknowledgement not received. This could be because the destination unit is not at the specified location.
- **Bad**: RollTrack message has not been sent correctly, acknowledged at the destination unit. This could be because the destination unit is not of the type specified.
- **Disabled**: RollTrack sending is disabled.

Setup

The **Setup** screen displays basic information about the unit. Use the functions on the screen to restart the unit, return all settings to their factory defaults, and to change the names of the inputs.

On the **Setup** screen, the following information is displayed:

- **Product:** This displays the name of the module.
- **Software Version:** This displays the currently installed software version number.
- **Serial No:** This displays the unit's serial number.
- **Build:** This displays the factory build number. This number identifies all parameters of the unit.
- **KOS:** This displays the operating system version number.
- **PCB:** This displays the PCB revision number.
- **Licensed Options:** This displays the unit's currently licensed options.

To reboot the unit, simulating a power-up/power-down cycle, click **Restart**.

To reset all of the unit's settings to their factory defaults, click **Factory Defaults**.

Note:

Resetting the unit to its factory defaults will also clear all the saved memory settings

To reset all of the unit's settings to their factory default settings, leaving user memories intact, click **Default Settings**.


Input 1 Name and Input 2 Name

These are the input names displayed in logging. To change the name of Input 1 or Input 2, type the name in the text field and click **S**. To return the name to its factory default, click **P**.

Operation from an Active Control Panel

The module can be operated from an active control panel via the RollCall™ network.

All operational parameters and selections described in the previous section are made using a system of menus displayed in the two LCD windows – the Information window and the Control window.

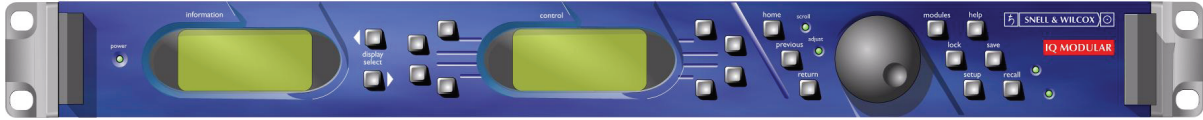

Information Window

The information window contains four lines of text indicating the current state of the unit.

Control Window

The Control window displays all selection menus and sub-menus.

The main or top level menu allows various sub-menus to be selected by pressing the button adjacent to the required text line.

Note that where a menu item is followed by three dots (...) this indicates that a further sub-menu may be selected.

Whenever a menu item is selected the parameters of that selection will be displayed in the Information window of the front panel. Where the selection is purely a mode selection and does not enable a sub-menu, the text will become reversed (white-on-black) indicating that the mode is active. If the mode is not available for selection the text will remain normal.

