



# V6811 + V6812

## **HD** VALID Generator

### INSTALLATION and OPERATION

© Pro-Bel Ltd

Filename: Vistek V6811&V6812 HD Valid Gen v1\_3.doc  
Issue: 1.3  
Date: June 08

**Pro-Bel Ltd  
Hartman House  
Danehill  
Lower Early  
Reading  
Berks, RG6 4PB  
ENGLAND**

Tel. +44 118 986 6123  
Fax. +44 118 975 5787  
Web: [www.pro-bel.com](http://www.pro-bel.com)



## CONTENTS

<b>1. DESCRIPTION</b>	<b>6</b>
1.1 General	6
1.2 Video Standards	7
1.2.1 Supported Video Standards	7
1.2.2 Supported Reference Standards	8
<b>2. INSTALLATION</b>	<b>9</b>
2.1 Rear Panels	9
2.2 Connections	10
2.2.1 Video Connections	10
2.2.1.1 SDI Inputs	10
2.2.1.2 SDI Reclocked & Buffered Output	10
2.2.1.3 SDI Main Outputs	10
2.2.1.4 Sync I/O	10
2.2.1.5 Video Reference	11
2.2.2 Audio Connections – V16HR3H	11
2.2.3 Audio Connections – V16HR3K	11
2.2.4 HDD44 Connector - Analogue Audio I/O	13
2.2.5 HDD26 Connector - Digital Audio I/O and signalling	14
2.2.6 Breakout Cables and Panels	15
2.3 Module and Environmental Specifications	16
2.4 Signal Specifications	16
2.5 Insertion Delay	17
2.6 Hardware	17
2.6.1 V6811 PCB	17
2.6.2 V6812 PCB	17
2.6.3 V6811 Links and Switches	18
2.6.4 V6812 Links and Switches	18
2.6.5 V6811 Fuse	19
2.6.6 V6812 Fuses	19
2.6.7 Flash Memory Card	19
2.7 Front Panels	20
2.7.1 LEDs & Switches	21
2.8 Compact Flash (CF) Insertion/Ejection	21
2.9 Module Placement	21
<b>3. SYSTEM CONTROL</b>	<b>22</b>
3.1 Local Control	22
3.1.1 Start up	22
3.1.2 Menu Control	22
3.1.3 Menu Examples	23
3.1.4 Sleep	23
3.2 Remote Control	23
<b>4. VALID SYSTEM</b>	<b>25</b>
4.1 Overview	25
4.2 Time Stamps	26
4.3 Video	26
4.3.1 Test Patterns	26
4.3.2 Caption ID Text	26
4.3.3 Timing Circle	26
4.3.4 Black Cross Flash	27
4.3.5 VALID Synchronisation	27
4.3.6 Video Synchronisation	27



4.4	Audio .....	28
4.4.1	Audio Channel Naming .....	28
4.4.2	Audio Groups .....	28
4.4.3	Audio Tones .....	28
4.4.4	Audio Channel Detection .....	29
4.4.5	Identifying V1681 and V6811 Tones .....	30
4.4.6	Audio Idents (Internal) .....	31
4.4.7	Audio Idents (External) .....	32
4.4.8	Audio Idents – Segments .....	33
4.4.9	Audio Idents – .wav Files .....	34
4.5	Meter Displays .....	35
<b>5.</b>	<b>BLOCK DIAGRAMS .....</b>	<b>37</b>
5.1	V6811 Video Module .....	37
5.2	V6812 Audio Module .....	37
<b>6.</b>	<b>SYSTEM OPERATION .....</b>	<b>39</b>
6.1	A/V Ganged Control .....	39
6.2	Video Controls .....	40
6.2.1	Output Selection .....	40
6.2.2	Standard Selection .....	40
6.2.3	Test Patterns .....	40
6.2.4	On-Screen Options .....	40
6.3	Audio Controls .....	41
6.3.1	Audio Selection .....	41
6.3.2	Audio Multiplexer Controls .....	41
6.3.3	MAL (Maximum Analogue Level) Set Up .....	41
6.4	Audio Idents .....	42
6.4.1	ID Selection .....	42
6.4.2	ID Timing .....	42
6.4.3	External ID synchronisation .....	43
6.5	Caption Controls .....	43
6.5.1	Editing Caption Text (Local) .....	44
6.5.2	Position .....	44
6.5.3	Colour .....	45
6.5.4	Size .....	45
6.6	Status Menu .....	46
6.6.1	V6811 States .....	46
6.6.2	V6812 States .....	46
6.6.3	Version Numbers .....	46
6.7	Engineering Controls .....	47
6.7.1	EDH (SD operation only) .....	47
6.7.2	Free-Run .....	47
6.7.3	Continuous Tone .....	47
6.7.4	Wide Screen Signalling (WSS) .....	47
6.7.5	Video Index (VI) .....	47
6.7.6	Caption Edit Lock .....	47
6.7.7	ID Channel Load Selection .....	47
6.7.8	ID Select .....	48
6.7.9	Display Sleep .....	48
6.7.10	Display Brightness .....	48
6.8	Config Controls .....	49
6.8.1	GPI control .....	49
6.9	Compact Flash Control .....	50
<b>7.</b>	<b>CALIBRATION .....</b>	<b>51</b>
7.1	Set-Up .....	51
7.2	Free-Run Frequency .....	51
7.3	Analogue Audio I/O .....	52
7.3.1	DAC .....	52
7.3.2	ADC .....	52



# VISTEK V6811 / V6812 VALID Generator

<b>8.</b>	<b>CONTROLS</b> .....	<b>53</b>
8.1	Video Controls – VIDEO .....	54
8.2	Audio Controls – AUDIO .....	55
8.3	Ident Controls – IDENTs .....	55
8.4	Caption Controls – CAPTIONS .....	56
8.5	Operating Conditions – STATUS .....	57
8.6	Engineering – ENG'ING.....	58
8.7	Calibration – CALIB .....	58
8.8	Configuration – CONFIG .....	59
<b>9.</b>	<b>TROUBLE SHOOTING GUIDE (FAQ)</b> .....	<b>60</b>
<b>10.</b>	<b>INITIALISATION &amp; ERROR CODES</b> .....	<b>61</b>
<b>11.</b>	<b>MENU TREE</b> .....	<b>62</b>
<b>12.</b>	<b>Compact Flash Files</b> .....	<b>64</b>
12.1	File Structure .....	64
12.1.1	Initialisation file.....	64
12.1.2	Video Identifiers .....	65
12.1.3	Audio Identifiers .....	65
12.2	File Creation .....	66
12.2.1	VALID8 INI File Generation Utility .....	66
12.3	Compact Flash System Software Upgrade.....	67
<b>13.</b>	<b>DOCUMENT REVISIONS</b> .....	<b>68</b>



# List of Figures

Figure 1 VALID Rears (V16HR3C & V16HR3H & V16HR3K) .....	9
Figure 2 V6811 PCB .....	17
Figure 3 V6812 PCB .....	17
Figure 4 Flash Memory Card .....	19
Figure 5 VALID Front Panels .....	20
Figure 6 VALID Broadcast System analysis .....	25
Figure 7 Group Channels & Naming .....	28
Figure 8 GLITS Tones .....	29
Figure 9 Frequency Spectra.....	30
Figure 10 ID Slot Timing.....	32
Figure 11 Sync signal timing.....	33
Figure 12 Audio Idents with staggered Segments.....	33
Figure 13 Four Channel Delay Meter and PPM Display .....	35
Figure 14 Eight Channel Delays.....	36
Figure 15 Eight Channel PPM Meters .....	36
Figure 16 V6811 Block Diagram .....	37
Figure 17 V6812 Block Diagram .....	37
Figure 18 Video & Audio output Selection Options.....	39
Figure 19 Caption Loading & Storing .....	43
Figure 20 User caption character set .....	44
Figure 21 GPI Relay Connections.....	49
Figure 22 VALID8 INI File Generation Utility Screen Shot.....	66



## 1. DESCRIPTION

---

### 1.1 General

VALID is a system for the Video and Audio Line-up and Identification of a broadcast link. It is to be used over a link while out of service or as a line-up signal before a contribution. It has two parts – a Generator which produces both the video and audio line up signals and a Reader which analyses them. While the combination allows the measurement of common video and audio parameters a special feature of VALID is to measure the relative timing of the video and audio signals. These timing errors are becoming increasingly common and appear to the viewer and listener as a Lip Sync error.

The VALID generator works in any of the High Definition television standards being used throughout the world and has been specifically designed to work over international links that may include high levels of compression and noise. It also works in both Standard definition formats (525/59.94 and 625/50) so is perfectly suited to the modern multi-format and multi-standard installation. It can work as a free running test signal generator or lock to an incoming SDI video or an external analogue reference. There is already an existing standard definition version of VALID that has been available for some years and this new HD VALID is fully compatible with it. This means that a HD VALID Reader will receive and understand an original SD Generator and vice versa. The reader automatically detects the input video standard. The reader makes certain measurements and makes them available on its front panel, over the DART remote control and puts meters on its video output.

The generator is normally two standard V1600 cards of which one generates the video signal while the other does the audio. With this arrangement the video output may contain the audio signals embedded within it but both analogue and digital outputs of the audio are available from the audio generator. The audio generator carries a Compact Flash card for storing captions and audio idents. If only the video card is used then it is only possible to produce embedded audio.

Similarly the reader is normally two standard cards of which one analyses the video signal while the other does the audio signals. If only the video card is used it is not possible to process external analogue and digital audio but only embedded audio. The reader normally puts PPMs onto the video, but this is not possible if only the video card is used, however it will still display the audio video timing measurements.

The video signal has several components. Colour bars are used to check levels, basic colorimetry and luminance/chrominance routing. A central generated circle shows how the aspect ratio has been correctly maintained or otherwise and it contains a rotating sweep which shows that the received signal is 'live' and has not been frozen in a Frame Store. Within the circle text describes the basic parameters of the originating signal, both video and audio. A four line caption can be added to the generator output to identify the specific transmission. This caption can be edited locally, from a remote control panel or loaded in from the Compact Flash card.

The audio signals are generally tone, but have different frequencies for each AES channel, and they have short gaps which are used for the timing measurements. It is important that the tone is generally continuous, but with gaps, rather than short tone bursts so it can be used with PPMs and VU meters for level checking. By having slightly different characteristics in the all audio channels the reader can check that there has been no swapping or mis-routing. It can also check if any channel has been inverted. These tones with the short gaps are referred to in this manual as Glits tones.



Both the generator and reader are fully controllable over the DART remote control system. For this there are two hardware panels available (the 1U V1605 and the 2U V1602) and a full Client-Server PC control system, known as Viewnet. While it is quite possible to use VALID on the small front panel the remote control systems make it much easier.

There is a PC programme available for creating caption and audio idents and storing them on the Compact Flash card.

This manual describes the generator in detail and there is another complementary manual for the reader.

## 1.2 Video Standards

### 1.2.1 Supported Video Standards

The HD VALID generator module will output both SD and HD, although an FPGA re-load is required when switching between SD and HD. The module will also generate video test patterns in both SD and HD. The supported standards are listed here.

Full Name	SMPTE	Colloquial
1920x1080/60/2:1	274M - 4	1080i60
1920x1080/59.94/2:1	274M - 5	1080i59
1920x1080/50/2:1	274M - 6	1080i50
1920x1080/30/1:1	274M - 7	1080p30
1920x1080/29.97/1:1	274M - 8	1080p29
1920x1080/25/1:1	274M - 9	1080p25
1920x1080/24/1:1	274M - 10	1080p24
1920x1080/23.98/1:1	274M - 11	1080p23
1920x1080/24/1:1SF	RP211 - 15	1080sf24
1920x1080/23.98/1:1SF	RP211 - 16	1080sf23
1280x720/60/1:1	296M	720p60
1280x720/59.94/1:1	296M	720p59
1280x720/50/1:1	296M	720p50
1280x720/30/1:1	296M	720p30
1280x720/29.97/1:1	296M	720p29
1280x720/25/1:1	296M	720p25
1280x720/24/1:1	296M	720p24
1280x720/23.98/1:1	296M	720p23
1920x1035/60/2:1	260M	1035i60
1920x1035/59.94/2:1	260M	1035i59
625/50/2:1	125/259M	625i50
525/59.94/2:1	125/259M	525i59



# VISTEK V6811 / V6812 VALID Generator

## 1.2.2 Supported Reference Standards

An external reference is available. It can be used as a reference to which to synchronise the test pattern generator. On the front panel menu it is possible to set the output field rate to be automatically the same as the reference if no SDI input is present. The Line Standard must also be set manually. Either Tri-level or Bi-level syncs can be used.

This table lists the available reference standards:

Standard	Sync Type	Compatible Video Input Frame- or Field Rates
1080i60	Tri-Level	30Hz, 60Hz
1080i59	Tri-Level	29.97Hz, 59.94Hz
1080i50	Tri-Level	25Hz, 50Hz
1080p30	Tri-Level	30Hz, 60Hz
1080p29	Tri-Level	29.97Hz, 59.94Hz
1080p25	Tri-Level	25Hz, 50Hz
1080p24	Tri-Level	24Hz
1080p23	Tri-Level	23.98Hz
1080sf24	Tri-Level	24Hz
1080sf23	Tri-Level	23.98Hz
720p60	Tri-Level	30Hz, 60Hz
720p59	Tri-Level	29.97Hz, 59.94Hz
720p50	Tri-Level	25Hz, 50Hz
720p30	Tri-Level	30Hz, 60Hz
720p29	Tri-Level	29.97Hz, 59.94Hz
720p25	Tri-Level	25Hz, 50Hz
720p24	Tri-Level	24Hz
720p23	Tri-Level	23.98Hz
1035i60	Tri-Level	30Hz, 60Hz
1035i59	Tri-Level	29.97Hz, 59.94Hz
625i50	Black & Burst	25Hz, 50Hz
525i59	Black & Burst	29.97Hz, 59.94Hz

The grey shaded rows highlight the most commonly used Reference Standards in today's Studio or Transmission environments.

## 2. INSTALLATION

### 2.1 Rear Panels

All signal connections are provided via the rear panels. The V16HR3C single width rear module provides connectivity for the V6811 when using only embedded audio signals.

The V16HR3H double width rear module is used with the V6811 video module and the V6812 audio module, providing full video and external audio connectivity. The high density D-type connectors are used for both analogue and balanced digital audio. The larger D-type connector has 44 pins and is referred to in this manual as the HDD44 Connector. The smaller one has 26 pins and is referred to as the HDD26 connector. The smaller connector also carries the GPI connections

The V16HR3K double width rear module provides video and unbalanced AES audio connectivity for the V6811 and V6812. The GPI connections are on a small Molex connector.

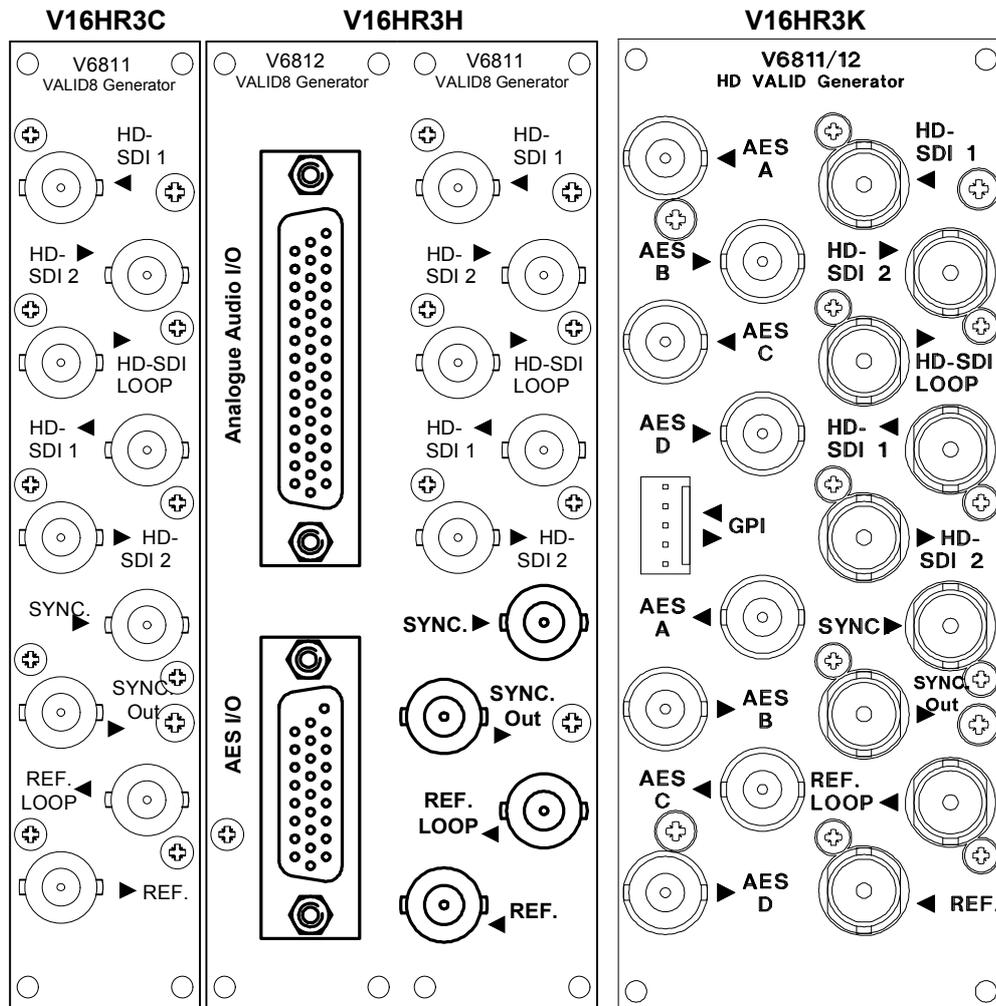


Figure 1 VALID Rears (V16HR3C & V16HR3H & V16HR3K)



## 2.2 Connections

### 2.2.1 Video Connections

Rear panel connections on the video side of the V16HR3H, V16HR3C, and V16HR3K rear panels.

Connector	Type	Function
HD/SDI 1	BNC	HD SDI Video I/P 1
HD/SDI 2	BNC	HD SDI Video I/P 2
HD/SDI LOOP	BNC	HD SDI Buffered O/P
HD/SDI 1	BNC	SDI O/P 1
HD/SDI 2	BNC	SDI O/P 2
Sync.	BNC	VALID Sync Input
Sync. Out	BNC	VALID Sync Output
REF. LOOP	BNC	Reference Loop
REF.	BNC	Reference Input. Switch selectable termination on board.

#### 2.2.1.1 SDI Inputs

The SDI inputs must conform to either the SMPTE292M or SMPTE259M standards, which describe the Bit Serial Digital Interface for HD and SD operation respectively. If only one input is required then it should normally be connected to SDI 1. Unused inputs can be left open, it is however recommended to terminate unused inputs with a 75Ω Terminator to improve noise immunity. Signals of different frame-rates, resolutions or even a mixture of SD and HD standards can be connected to both inputs at the same time, however only one of the two inputs can be selected at any one time. Note that switching between different standards is neither instant nor glitch-free. This has to do with the necessity of the SDI de-serialiser hardware to lock to the newly detected standard. Furthermore, in case of an SD-to-HD switch over (or vice versa), the FPGA on the baseboard may have to be re-loaded. This process takes about 2 to 3 seconds.

The selected SDI input can be used to set the operating standard of the generator and to set the output timing.

The input selection is done on the **VIDEO : Source** menu.

#### 2.2.1.2 SDI Reclocked & Buffered Output

This is always available, and is a relocked version of either SDI 1 or SDI 2, depending on the source selection. It is an unprocessed signal.

#### 2.2.1.3 SDI Main Outputs

The main VALID SDI output is available on two BNCs.

#### 2.2.1.4 Sync I/O

The sync performs two functions, it is used to synchronise the black flash of multiple generators, and to control external audio ident generators.

The VALID generator can take a TTL level signal as a sync input which will synchronise the black flash to the sync's source.

The sync output will be a copy of the sync input, if present, otherwise a pulse will be generated as per the audio ident settings. The signal will be high for the duration of the set ID length, and low for the remaining slot length. Each edge of the signals transition will be coincident in time with the black flash of the unit so it can be used as a reference for other generators. To synchronise generators the ID Time and Slot Length must all be set the same. The modules must also receive the same video reference.

For more details see section 6.4.3.



## 2.2.1.5 Video Reference

An external reference is available for setting the field rate of the Valid output. This reference may be used for locking the output of the Valid Generator, but the unit cannot adjust its output timing relative to the reference.

The reference may be either conventional bi-level sync, black and burst or the new tri-level HD sync.

The reference is looped on the rear module so it can be daisy chained along several modules although for accurate timing, this is not recommended. The loop is on the rear module so that the link is not broken if the Valid generator is removed.

The main unit has a termination on the I/O daughter board which is selected with a small slide switch. There should be only one termination on the reference signal and it should be at the end of the chain. Since the termination is on the main module it will be removed if the main module is removed. To avoid this leave the termination OFF and terminate on the ref loop BNC. (Section 2.6.3)

The unit will use the SDI inputs as the system reference, if present, otherwise the external reference will be used. If neither the SDI nor an external reference is present the unit will free run.

Section 6.2.2 describes how to set up the operating standard.

## 2.2.2 Audio Connections – V16HR3H

The V16HR3H double width rear provides additional I/O:

Connector	Type	Function
Analogue Outputs	HDD 44	8 Analogue Audio Outputs & 8 Analogue Audio Inputs
AES Outputs	HDD 26	4 AES Outputs & 4 AES Inputs

The V6812 always shares a double width rear panel with the V6811. These are the V16HR3H which provides balanced analogue audio I/O and balanced AES audio I/O, and the V16HR3K which provides unbalanced AES audio only. Breakout cables which take the high density D-types on the V16HR3H rear to cable XLR connectors are available.

## 2.2.3 Audio Connections – V16HR3K

The V16HR3K double width rear provides the following additional I/O:

Connector	Type	Function
AES A to D In	BNC	4 AES Unbalanced Inputs
AES A to D Out	HDD 26	4 AES Unbalanced Outputs
GPI I/O	Molex	Pin1 GPI Input 1 Pin2 GPI Input 2 Pin 3 GND Pin 4 +5V Pin 5 GPI Output

On the V16HR3H rear panel there is a 44 way HDD connector in the same footprint size as a standard 25 way D type connector. It is used for all the balanced analogue audio connections, of which there are 8 input channels and 8 output channels. Also on the same rear panel there is a 26 way HDD connector in the same footprint size as a standard 15 way D type connector. It is used for all the balanced AES audio connections, of which there are four input AES and four output AES signals.

If the HDD socket is to be used for audio and connected with multi-way cable it is recommended that the audio pairs, both analogue and digital, are individually screened.



## VISTEK V6811 / V6812 VALID Generator

On the V16HR3H rear panel the signals to and from the pins on the HDD44 Analogue I/O connector and the HDD26 Digital I/O connector are as shown in the following tables.

Note: All references are made to channels A to D in the tables although the actual channels that are output may be either A to D or E to H depend on the setting of **AUDIO : Channels**.

## 2.2.4 HDD44 Connector - Analogue Audio I/O

Signal Group Label	HDD44 Pin	Signal Function	Notes
Audio 1 AL in ←	14	Input Analog AL Pos	<p>These are electronically balanced ('transformerless') differential analog audio inputs with high Zin of 20kΩ.</p> <p>All inputs are a.c. coupled</p> <p>Maximum analogue input level (MAL) is settable on the V6811 module in 1dB increments from +12dBu to +24dBu. The default is +18dB.</p> <p>To apply a single-ended signal, connect the 'hot' from the source to the 'Pos' input, and the 'Neg' input to GND = source GND.</p>
	44	Input Analog AL Neg	
	15	Input Analog AL Gnd	
Audio 2 AR in ←	13	Input Analog AR Pos	
	43	Input Analog AR Neg	
	28	Input Analog AR Gnd	
Audio 3 BL in ←	12	Input Analog BL Pos	
	42	Input Analog BL Neg	
	26	Input Analog BL Gnd	
Audio 4 BR in ←	11	Input Analog BR Pos	
	41	Input Analog BR Neg	
	40	Input Analog BR Gnd	
Audio 5 CL in ←	9	Input Analog CL Pos	
	39	Input Analog CL Neg	
	10	Input Analog CL Gnd	
Audio 6 CR in ←	8	Input Analog CR Pos	
	38	Input Analog CR Neg	
	24	Input Analog CR Gnd	
Audio 7 DL in ←	7	Input Analog DL Pos	
	37	Input Analog DL Neg	
	21	Input Analog DL Gnd	
Audio 8 DR in ←	6	Input Analog DR Pos	
	36	Input Analog DR Neg	
	5	Input Analog DR Gnd	
Audio 9 DR out ⇒	4	Output Analog DR Pos	<p>These are electronically true balanced ('transformerless') differential outputs with low output impedance of Zout = 50Ω.</p> <p>All outputs are dc coupled.</p> <p>Maximum analogue output level (MAL) is settable on the V6811 module in 1dB increments from +12dBu to +24dBu. The default is +18dB.</p> <p>To obtain a single-ended signal, connect the 'Neg' output to GND and connect the 'Pos' output to the 'hot' of the single-ended destination input.</p> <p>Maximum output level with single ended is +18dBu.</p>
	34	Output Analog DR Neg	
	19	Output Analog DR Gnd	
Audio 10 DL out ⇒	3	Output Analog DL Pos	
	33	Output Analog DL Neg	
	19	Output Analog DL Gnd	
Audio 11 CR out ⇒	2	Output Analog CR Pos	
	32	Output Analog CR Neg	
	16	Output Analog CR Gnd	
Audio 12 CL out ⇒	1	Output Analog CL Pos	
	31	Output Analog CL Neg	
	16	Output Analog CL Gnd	
Audio 13 BR out ⇒	23	Output Analog BR Pos	
	22	Output Analog BR Neg	
	35	Output Analog BR Gnd	
Audio 14 BL out ⇒	18	Output Analog BL Pos	
	17	Output Analog BL Neg	
	35	Output Analog BL Gnd	
Audio 15 AR out ⇒	20	Output Analog AR Pos	
	25	Output Analog AR Neg	
	29	Output Analog AR Gnd	
Audio 16 AL out ⇒	30	Output Analog AL Pos	
	27	Output Analog AL Neg	
	29	Output Analog AL Gnd	

**Note:** Pin 1 is at the bottom



## VISTEK V6811 / V6812 VALID Generator

### 2.2.5 HDD26 Connector - Digital Audio I/O and signalling

Signal Group Label	HDD26 Pin	Signal Function	Notes
Audio 1_2	9	Input AES A Pos	These are balanced transformer coupled digital inputs to AES3. $Z_{in} = 110\Omega$
AES A in $\leftarrow$	18	Input AES A Neg	
Audio 2	8	Input AES B Pos	
AES B in $\leftarrow$	17	Input AES B Neg	
GND	26	GND	Unbalanced AES inputs are not available on this rear panel
Audio 3_4	7	Input AES C Pos	
AES C in $\leftarrow$	16	Input AES C Neg	
Audio 4	6	Input AES D Pos	
AES D in $\leftarrow$	15	Input AES D Neg	
GND	25	GND	
Audio 5_6	5	Output AES A Pos	These are balanced transformer coupled digital outputs to AES3. $Z_{out} = 110\Omega$
AES A out $\Rightarrow$	14	Output AES A Neg	
Audio 6	4	Output AES B Pos	
AES B out $\Rightarrow$	13	Output AES B Neg	
GND	1	GND	Unbalanced AES outputs are not available on this rear panel
Audio 7_8	3	Output AES C Pos	
AES C out $\Rightarrow$	12	Output AES C Neg	
Audio 8	2	Output AES D Pos	
AES D out $\Rightarrow$	11	Output AES D Neg	
Audio 9	20	Reserved	Reserved. Usage TBA
AES REF in $\leftarrow$	19	Reserved	
Misc. 1	24	Input GPI_1 (TBA)	Reserved. Usage TBA
GPI $\leftarrow$	23	Input GPI_2 (TBA)	
GND	10	GND	
Misc. 2	22	Output GPO_1 (TBA)	Reserved. Usage TBA
GPO $\Rightarrow$	21	Output GPO_2 (TBA)	

**Note:** Pin 1 is at the bottom

## 2.2.6 Breakout Cables and Panels

Pro-Bel can supply prefabricated Breakout Cables for use with the HDD44 and HDD26 connectors.

The following cables are available:

Part No.	Description	Drawing Ref.	Notes
V6905	V6812/V6822 HDValid HDD26 to XLR	130-4681	4 x AES in, 4 x AES out
V6906/IN	V6812/V6822 HDValid HDD44 to XLR SKT	130-4682	8 x Analogue IN only
V6906/OUT	V6812/V6822 HDValid HDD44 to XLR (PLG)	130-4683	8 x Analogue OUT only

There is also a break out panel, V6907, which connects to the HDD connectors with ribbon cable and gives more conventional connectors on a 1U panel.

The following are available:

Part No.	Description	Notes
V6907/BAL	HDD44 and HDD26 to Phoenix connectors	8 x Analogue In 8 x Analogue Out 4 x AES in 4 x AES out
V6907/UNBAL	HDD44 and HDD26 to Phoenix and BNC connectors	8 x Analogue In 8 x Analogue Out 4 x AES in 4 x AES out



## 2.3 Module and Environmental Specifications

Parameter	Environmental Specification
Module Size (V6811)	Standard V1600 range module – 100mm x 270mm. Fits in V1606 3U rack, V6011 '1-Box' or V6012 TwoBox
Module Size (V6811 + V6812)	Two standard V1600 range module – 100mm x 270mm(each) Fits in two slots on a V1606 3U rack, or V6012 TwoBox
Rear Panels	V16HR3C Single Width Rear (V6811 only) V16HR3H Double Width Rear (V6811 + V6812) V16HR3K Double Width Rear (V6811 + V6812)
Operating Voltage	+9 .. +18V
Operating Temperature	0°C to +40°C. Cooling is from the V1606 rack.
Power Consumptions	V6811 10W V6812 12W

## 2.4 Signal Specifications

Signal	Type	Comments
Video Inputs	75Ω BNC	Input Format: SMPTE259M or SMPTE292M Input Impedance: 75 Ohm Return Loss: > 15dB, 5MHz – 1.5GHz Equal. Cable Length: 0-250m @ 270Mbps 0-100m @ 1.5Gbps
Video Outputs	75Ω BNC	Output Format: SMPTE259M or SMPTE292M Output Impedance: 75 Ohm Return Loss: > 15dB, 5MHz – 1.5GHz Jitter Performance: < 0.2UI p-p (Timing @ 270Mbps) < 0.2UI p-p (Alignment @ 270Mbps) < 1UI p-p (Timing @ 1.485Gbps) < 0.2UI p-p (Alignment @ 1.485Gbps)  Amplitude: 800mV p-p (terminated) Drive Capability: > 250m @ 270Mbps (Belden 8281) > 100m @ 1.5Gbps (Belden 1694A)
Video Reference Input	Bi-Level or Tri-Level	1V Composite video, but Black & Burst is recommended.  Tri-Level sync as per SMPTE274M or 296M.
Sync Pulse	LVTTL with +/- 24mA drive capability	Positive pulse representing the duration of the Audio ID playing time. Also used to synchronise the 4 second period of several VALIDs
Audio, Digital (AES)	Balanced	Zin = 110Ω Zout = 110Ω Input Sample rate 32–192kHz Output Sample rate 48kHz
Audio, Digital (AES)	Unbalanced	Zin = 75Ω Zout = 75Ω Input Sample rate 32–192kHz Output Sample rate 48kHz
GPI Input	0V to 5V	Note: no on-board voltage protection
GPI Output	LVTTL with +/- 24mA drive capability	

## 2.5 Insertion Delay

Video insertion delay is less than 10 us.

Audio insertion delay is 4 ms including the delay through the Sample Rate Converters (SRC).

By design the audio insertion delay for both analogue and digital audio is constant. Embedded audio can only be passed through as part of the video so is subject to the same delay as the video.

## 2.6 Hardware

The figures below show diagrammatically the printed circuit boards along with certain other components of interest. In particular it shows the position and orientation of links and switches which set up the operation modes and the location of the sub-modules.

The FLASH Memory location is shown, as it is the component that would need to be changed as a result of any software upgrade on either module in the field. The FLASH Memory is a proprietary module and can only be obtained from Pro-Bel. Although the FLASH Memory has a polarising key, care must still be taken when refitting the FLASH Stick to ensure that it is inserted the right way round and pushed fully 'home'.

### 2.6.1 V6811 PCB

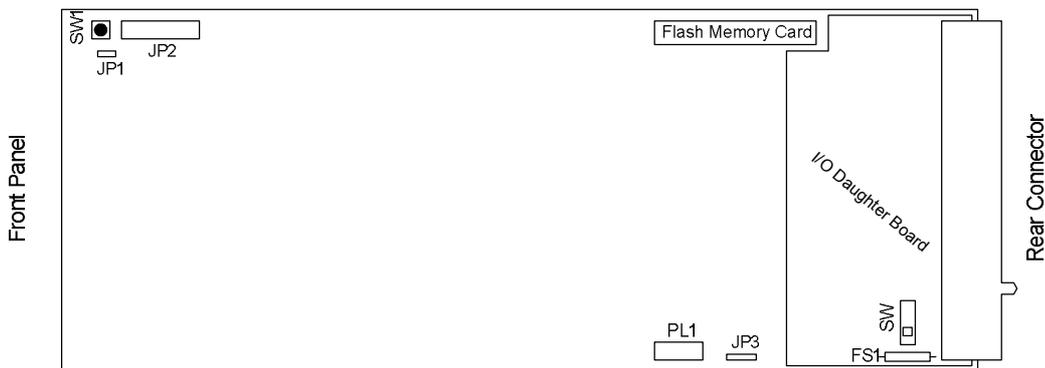


Figure 2 V6811 PCB

### 2.6.2 V6812 PCB

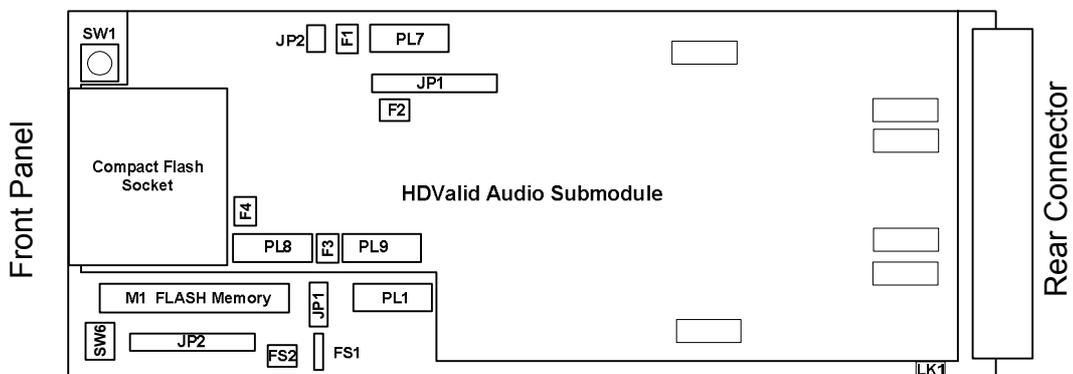


Figure 3 V6812 PCB



## 2.6.3 V6811 Links and Switches

The purposes of the links and switches are shown in the following table.

ITEM	Title	Comments
SW1	RESET	Used to reset the internal microcontroller.
JP1	Debug	For development and test use only. (May not be fitted)
JP2	H8 Program	For development and test use only. (May not be fitted)
PL1	JTAG Port	Never used in operation. (May not be fitted)
JP3	JTAG Enable	For Test. Fit in 2-3 position.
SW	Video REF Term	Slider up – Terminated with 75Ω Slider down – Hi-Z (un-terminated)

## 2.6.4 V6812 Links and Switches

The purpose of the links and switches is shown in the following table.

ITEM	Title	Comments
SW 1	RESET switch	Used to reset the internal microcontroller and DSP.
SW6	DEBUG switch	For development and test use only. Both switches should always be set 'north'.
PL 1	JTAG Connector (baseboard)	For development and test use only. May not be fitted
PL7	JTAG Connector (sub-module)	For development and test use only. May not be fitted
JP 1 (baseboard)	JTAG enable (baseboard)	For development and test use only. May not be fitted
JP2 (sub-module)	JTAG enable (sub-module)	For development and test use only. May not be fitted
JP2 (baseboard)	H8 Programming Connector	For development and test use only. May not be fitted
JP1 (sub-module)	Beck SC123 Programming Connector	For development and test use only. May not be fitted
LK 1	Not used	May not be fitted.
PL8	Header for Internet connectivity	For future development. May not be fitted
PL9	Header for USB connectivity	For future development. May not be fitted.

## 2.6.5 V6811 Fuse

There is a single fuse on the IO sub-module on the V6811. It is in series with the main input supply and will only blow for a serious short circuit fault, probably on the input of the main PSU sub-module.

FS1	Fuse 3 Amp Wire ended	In series with the DC input to the module on the I/O daughter board.
-----	-----------------------	--


## 2.6.6 V6812 Fuses

There are several fuses on the V6812:

FS 1	Fuse 2 Amp Wire ended		In series with the +15V input to the module.
FS2	Resettable fuse 0.5A SMD		Protects 3V3 power feed to JP2 programming connector. Factory use only.
F2	Resettable fuse 0.5A SMD		Protects 3V3 power feed to JP1 programming connector. Factory use only.
F3	Resettable fuse 0.5A SMD		Protects 3V3 power feed to JP8 and JP9. Factory use only
F4	Resettable fuse 0.5A SMD		Protects 5V power feed to JP8 and JP9 headers. Factory use only

## 2.6.7 Flash Memory Card

The Flash Memory Card stores the firmware for the Microcontroller and the FPGA and is essential for the operation of the module. If this card is missing, the front panel display will come up with an error message (ERROR 10). The Flash Memory Card sits in a socket with a location peg to the right. In case of a firmware upgrade make sure that the replaced card sits firmly and straight in the socket with the location peg mating with the positioning hole on the baseboard.

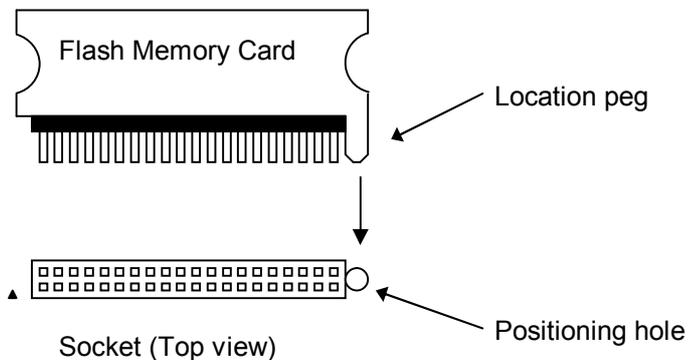

**Figure 4 Flash Memory Card**


The Flash Memory Card is re-programmable. Customers are kindly asked not to throw it away after having upgraded a module with a newer firmware version but to return it to Pro-Bel.

## 2.7 Front Panels

The front panels are similar to other complex V1600 types. They provide the user with total control and monitoring of the unit without the need to consult manuals and read unlabelled indicators.

The front panel of the V6811 and V6812 are shown below illustrating the location of all the front panel switches and displays.

Apart from the insertion and removal of the of the CF card all control is through the V6811.

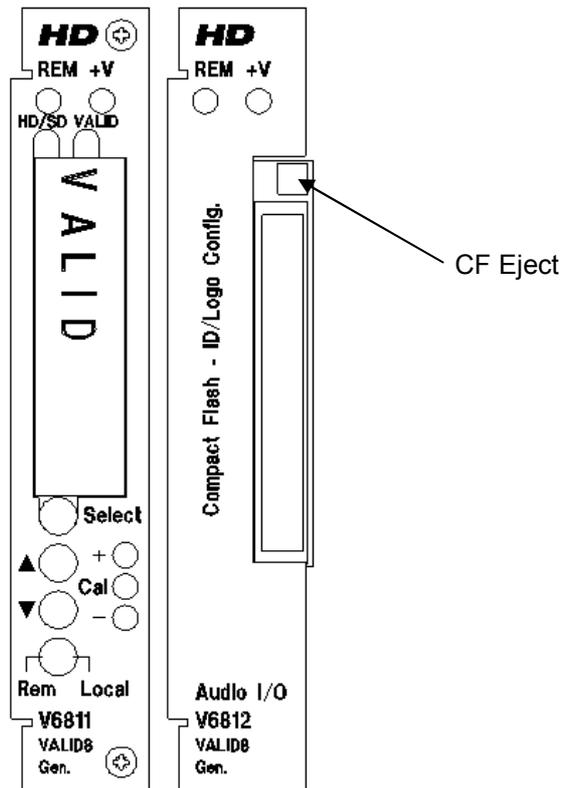

**Figure 5 VALID Front Panels**

Instructions on how to use the menu system on the front of the V6811 are given in section 3.1.



## 2.7.1 LEDs & Switches

- +V** When lit indicates that power is applied to the module, and the main on-board regulator is working.
- REM** Flashes during DART communications, can indicate a DART remote control problem if never lit.
- VALID** Indicates the presence of the Glits tone and the black flash components on the output SDI essential to the measurement of audio/video timing. Essentially the state of the LED on or off indicates the presence of the Glits tone and the LED will pulse on or off (depending on the usual LEDs state) when the black flash occurs. The various states are listed below

LED State	Pulse	Glits Tone	Black flash
On	Off	Present	Present
On	None	Present	Not Present
Off	On	Not Present	Present
Off	None	Not Present	Not Present
On/Off 2 Sec Cycle	None	Loading idents	

Normal Operation

**+/- Cal** Indication of the current menu item's value in relation to the calibrated or default value.

**Select/Up/Down** are menu controls and are explained in detail in section 3.1.

**Rem/Local** Switched the module into remote or local control modes.

**CF Eject** Use to eject the Compact Flash memory module, see section.

## 2.8 Compact Flash (CF) Insertion/Ejection

The Compact Flash memory card can be inserted and ejected without powering down the V6812.

To insert the CF module ensure the ejector button is not proud of the front panel face plate, then carefully insert the CF with the finger grip to the left. Push the CF module home, note the insertion force is minimal.

The ejector button must be pushed once to release the button out for use, then pushed again all the way back into front panel's face plate. The CF module can now be pulled away from the front panel. The ejection procedure can be tricky, particularly if there is a module inserted to the right of the V6812. If the ejector is not pushed all the way home it will just come right out again, ready for a second attempt.

## 2.9 Module Placement

The V6811 should always be positioned on the left of the V6812 as shown in Figure 5.

Although the main connectors of both modules are the same type they are in slightly different positions, so if you try to force either card into the wrong slot they could be damaged.



## 3. SYSTEM CONTROL

---

### 3.1 Local Control

#### 3.1.1 Start up

Local control and monitoring of the modules is done through the front panel of the V6811 with its eight character LED display and three control buttons **Select**, **▲** and **▼**. There are three LEDs which also contribute to the status indication; these are labelled **+**, **Cal** and **-**.

After power up and having successfully passed the power-on-self test, the display will start at the top level and show the unit type and any options that are included. The display will be one of these:

Unit type	Option(s)
V6811	<i>No options are available</i>

At present there are no Options available for the V6811 or V6812. Options are usually shown as a 2 letter code, for example VP for Video Proc amp. If there are more options than can be shown on the display then the last character will be '+', and the **▼** button can be pressed to show other options.

#### 3.1.2 Menu Control

The **Select**, **▲** and **▼** buttons are used to manoeuvre around the menu system. The menu structure has five levels and the **Select** button is used to go up and down the structure. The **▲** and **▼** buttons are used to move between selections or to adjust a parameter depending on which sort of menu is displayed. The five levels are as follows:

Sleep	Display is blank (except for Banner warnings).
Top Level	As above, e.g. <b>V6811</b>
Main Menu	The Main menu items, such as <b>VIDEO</b> , <b>STATUS</b> , <b>ENG'ING</b> etc. These items are all in Upper Case.
Sub Menu	Menu items under each main heading, such as <b>Source</b> or <b>Vid O/P</b> under the <b>VIDEO</b> main menu. These items are all in Sentence Case (generally lower case but with upper case first letters).
Parameter	The lowest level under the Sub Menu, often in lower case, is used to actually adjust a parameter. The display will depend on the actual parameter and may be a value such as <b>+0.00dB</b> for a gain or <b>ON</b> or <b>OFF</b> for a switch variable. There is usually a title to describe the variable and a small icon in the left hand character position, but 8 characters cannot provide for a detailed description.

To move down a level just press the **Select** button briefly; then press either the **Select** button again to go down another level or the **▲** and **▼** buttons to move around the options within a level.

To move up a level press and hold the **Select** button for about half a second which will move up one level. If you continue to hold the **Select** button then it will move up a level every half a second until it reaches the Sleep level (one above the Top Level).

A complete list of all the menus is given in Section 8.



### 3.1.3 Menu Examples

This section has examples of how to manoeuvre through the menu system. The first one starts with the unit in its 'sleep' mode where the display is blank, and then proceeds to set the source to the second input (I/P 2).

Action	Display	Comments
Select	V6811	Top Level
Select	VIDEO	The Main Menu we want
Select	Output	The first Sub Menu in the list
▼	Vid O/P	
▼	Pattern	
▼	Source	The Sub Menu we want
Select	I/P 1	
▲	I/P 2	Set it as we want it

Hold the select button down to navigate back up through the menu hierarchy.

### 3.1.4 Sleep

If the front panel is not used for a certain amount of time then the display will automatically go into a sleep mode when it will be blank. Pressing any of the buttons will cause it to 'wake up' back into the top level. The time delay before the unit slips into sleep mode can be set up using the **ENG' ING : Sleep** menu.

The brightness of the display can also be adjusted using the **ENG' ING : LEDLevel** menu.

## 3.2 Remote Control

In addition to being controlled with the menu system on the front panel the V6811 and V6812 can also be controlled over the DART remote control system. For this it should be fitted into a rack which also contains a Rack Controller. The Rack Controller provides an interface between all the units in the rack and the external DARTNET network.

All control of the units, both remote and local is, done through the V6811.

Various controlling devices are available for accessing units on the DARTNET. There are two hardware control panels, the V1602 and the V1605 which are 2U and 1U units respectively. There is also Viewnet which is a sophisticated Client Server interface. It is also possible to have third party software written to interact with DARTNET. The details and specification of the DART interface are described elsewhere.

It is important that the DART controlling device is sufficiently up to date to control the V6811 and V6812. In particular the V6811 is a Class 7 device and therefore must be fitted to a rack with the new V6801 type Rack Controller and the Rack Controller software must be version R25 or later. The V6801 type Rack Controller can be easily identified by the 3 segment display on its front which will normally show the Rack address; for example A02. If the recessed function button (not the reset button) is pressed 5 times the display will show the version number, e.g. **r25**.

There are separate settings for the unit when operating in Local and Remote control modes. This means that if the unit is changed between Local and Remote mode then the settings may change. The advantage of this is that if the unit has been set up locally and the operator inadvertently changes to Remote mode (which probably has different, or even default, settings) the local settings are not lost. There could be a disadvantage in that once the unit has been set up remotely it cannot not be switched to Local without causing a disturbance.



## **VISTEK V6811 / V6812 VALID Generator**

When in Remote Control the front panel menu system is still active but is only used to monitor the status of the unit. It cannot be used to change anything.

## 4. VALID SYSTEM

### 4.1 Overview

With the amount of video and audio processing in modern broadcast systems the timing of the audio to the video is always a consideration. Whether simply synchronising video to a system reference or routing via MPEG uplinks and downlinks the potential of the audio and video being subjected to a different amount of delay exists at every stage.

VALID was conceived to provide a simple to use, and simple to implement solution to measure the difference in the audio to video timing in a broadcast system, alleviating the need for an operator to manually adjust the timing every time the system configuration changes, and through trial and error getting the lip-sync 'nearly right'.

The VALID solution measures the audio to video timing without the need to know anything about the system which it is to analyse. The VALID test signal can be subjected to most video and audio processing functions such as standards conversion, aspect ratio conversion, compression, audio gain adjustments, audio conversion (analogue to digital, and digital to analogue conversion). So the VALID test signal can enter the broadcast system, then analyse the audio to video timing at multiple signal destinations subjected to different processing paths.

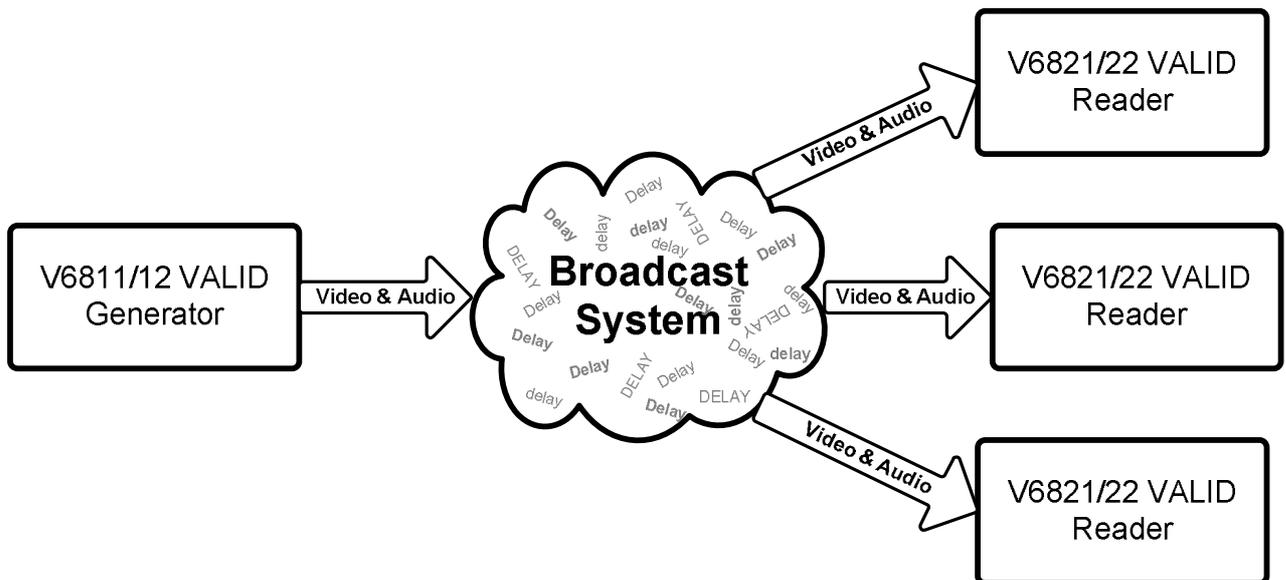


Figure 6 VALID Broadcast System analysis

But the VALID system is more than a lip-sync measurement device. With VALID it is possible to detect a frozen picture, audio inversion, channel swaps, and down-mixed channel pairs to name a few.

A general principle of the relative time measurements is to put in some kind of video and audio markers, or time stamps, at the generation end. When the markers are detected at the receiving end the relative time positioning can be measured. In the case of VALID the video markers is the black cross that is inserted every four seconds (usually referred to as the Black Flash), and the audio markers are the gaps in the tone that's start off with an exact timing relationship to the black flash.

The following paragraphs will discuss some of the key elements of the VALID generator test signal, and the measurements possible on the VALID reader.



## 4.2 Time Stamps

In VALID the video time stamp is a short duration Black Cross on the stationary, or quasi-stationary, background test pattern. In most standards this is repeated precisely every 4 seconds, but for any standards with an NTSC type field rate, such as 59.94Hz, the repetition rate is actually 4.004 seconds. This difference of 4ms is compensated for in the reader processing. The black flash is not simply a single field pulse but has proper temporal anti-aliasing. This improves the system performance when the signal undergoes any temporal processing, such as standards conversion.

The audio time stamp is gaps in otherwise continuous tone. All the left channels (sometimes called Channel 1) have a single gap whose start is exactly coincident with the temporal centre of the black flash. The right channels have two gaps slightly later than the left channel gap. This makes it much easier to do a listening stereo channel identification, and checking for mono.

## 4.3 Video

### 4.3.1 Test Patterns

A number of background test patterns can be generated internally by the V6811 including 100% Bars, 75% Bars, and SDI Matrix. If a preferred test pattern is not provided by the V6811 the test pattern can be input to the V6811 through either of the SDI inputs. All the on-screen objects, the captions and the black flash, can still be overlaid.

All the delay measurements can still be performed with an external test pattern as long as it is static, and does not obscure the black flash with large black areas of screen.

### 4.3.2 Caption ID Text

Video caption idents are a set of 4 captions each of which can have its size, position and colour set by the user. There are three sizes, twelve vertical positions (they are always centred horizontally) and eight choices of colour. All these can be set either front the front panel or remotely over DART.

With the V6812 board captions can be loaded from a Compact Flash card which can store up to 63 sets of captions which can be loaded into VALID.

The caption text can be keyed into any test pattern or the external input and can individually be turned on and off.

The caption text can be edited both locally on the font panel and remotely over DART..

### 4.3.3 Timing Circle

A precisely dimensioned circle may be overlaid over the output video. The circle is exactly proportioned for the current aspect ratio, and if correctly displayed should be circular. In the HD standards the circle is always drawn for the 16:9 aspect ratio, but in SD there is a choice. It can be either 4:3 or 16:9 depending on the service required. In fact in SD there are two completely different patterns for these two cases.

The centre circle usually has a moving annulus, which is either a rotating greyscale or a series of red or green sectors. The movement is essential at the receiving end to show that the signal is 'live' and has not been frozen in a frame store.

The red and green sectors have been positioned to exactly coincide with the tone gaps briefly discussed above and to be described in detail in section 4.4.4. The red sector corresponds with gap in the left channel, and the two green sectors with the two gaps in the right channel. The choice of red and green for left and right was made to match the international convention for navigation lights.

## 4.3.4 Black Cross Flash

For audio video timing measurements to be made with a V6821 VALID reader, both audio and video signals are time marked. The black flash is the key signal for the video timing measurement. VALID generates a spatially and temporally shaped black cross over a number of video fields. This shaping allows the video to be subjected to various filtering operations and still maintain the important timing signal. At the VALID reader complex detection logic identifies the black flash and locates its true sub-field timing. The VALID reader can then calculate the delay between this point and the audio's timing signal.

## 4.3.5 VALID Synchronisation

Multiple VALID generators can be co-timed using the sync output and input. A co-axial cable should link the Sync Out from the master to the Sync In of the slave. The slave unit will then lock its 4 second sequence to the Sync In and provide its own Sync Out for any other generators.

Since the Sync Out signal is locked to the 4 second sequence it can also be used to trigger an external audio identification generator.

## 4.3.6 Video Synchronisation

The generated video can be synchronised to either an SDI input or an external reference. Usually an external SDI signal will be used, and then the generator can be switched between the external video and the generated video with no disturbance. If no external SDI signal is connected then the reference can be used. If there is no reference then the generator will free run.

The precedence for the reference is:

- 1 Input SDI Video
- 2 External Reference
- 3 Free Run

Note that there is no selection for this. The reference is automatically selected following the precedence above.

The VALID generator is **not** a Frame Synchroniser. Even if it has an SDI input and a reference connected to it it will not lock the input to the reference.

## 4.4 Audio

### 4.4.1 Audio Channel Naming

When discussing the audio channels we refer to them by a naming convention that is derived from the order in which audio is embedded into video. It is possible to embed 4 groups of audio, each group consisting of 4 audio channels typically treated as 2 stereo channels. This gives us a possible 16 mono channels, or 8 stereo channels. The naming convention here assigns a letter to the stereo channel and a number (1 and 2) to differentiate the two channels in the stereo pair. The order in which the letters are assigned is the order they are typically embedded, from 'A', being the first stereo channel in group 1, to 'H', being the second channel in group 4. The '1' and '2' are typically the left and right channels of a stereo pair as shown in Figure 7.

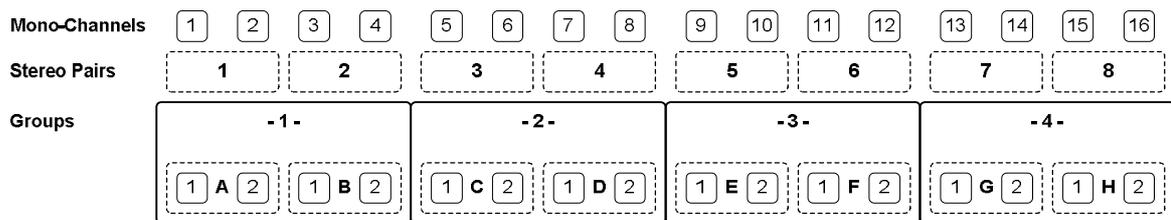


Figure 7 Group Channels & Naming

### 4.4.2 Audio Groups


The VALID system has been designed to identify, and so distinguish between, all 8 stereo (16 mono) audio channels using a combination of the tone gaps and different frequencies. With embedded audio this corresponds to the maximum of 4 groups. However the V6811/12 can only generate 4 pairs of audio at any one time, which corresponds to two groups. These are always grouped as audios A-D or E-H and the groups as 1&2 or 3&4. The V6821/22 combination is the same.

### 4.4.3 Audio Tones

The V6811 test-tone generator generates 4 stereo tones that can be embedded into the output video. When the V6812 is used the tones are also available as AES and analogue audio. The user can select to generate tones A to D or E to H. This selection determines the frequencies of the tones and the groups on to which they are embedded (A to D on Groups 1 and 2, and E to H on Groups 3 and 4). All 8 possible tones are generated at unique frequencies with a short gap in the left channel and two short gaps in the right channel (see Figure 8 and (b) in Figure 9 below).

**4.4.4 Audio Channel Detection**

Left (Alpha1) and right (Alpha2) channels are identified by a sequence of short breaks in the tone as shown in Figure 8. Also shown, at the bottom of the diagram, are representations of the rotating circle inset. The colour shown is the colour observed at the top (12 o'clock) position on the circle through the audio sequence.

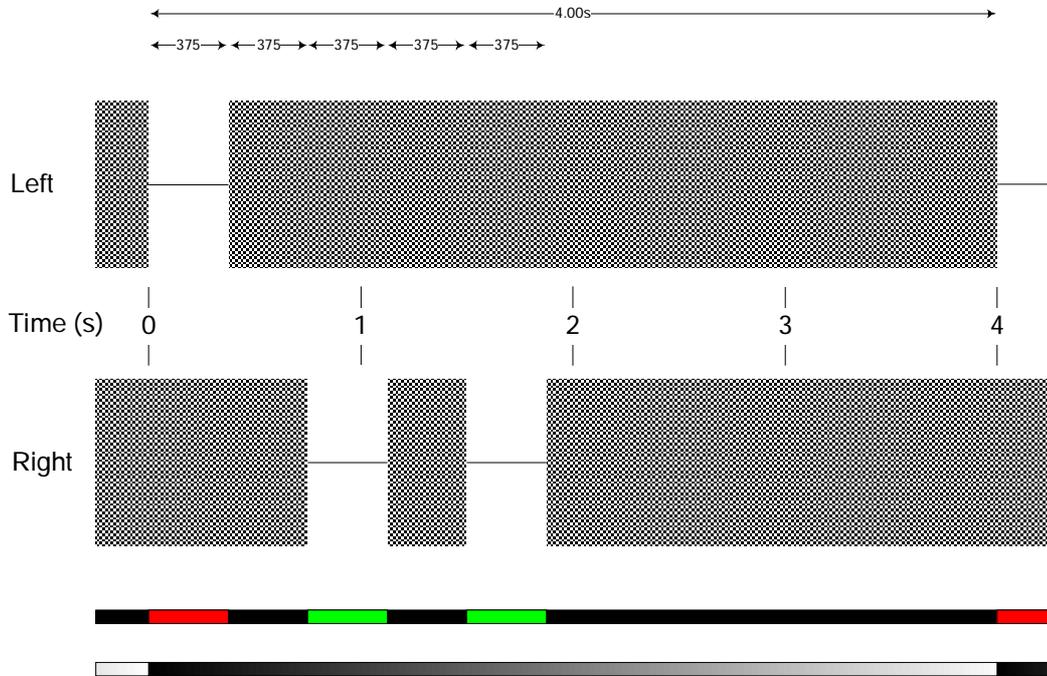

**Figure 8 GLITS Tones**

It is the gaps in the audio signal that are detected on the VALID reader as part of the audio to video delay measurement.

In order to avoid automatic muting by downstream audio devices (and subsequent 'soft restart' which could cause problems at the receiver end), the audio breaks are not complete silence, the tone is reduced in level by 60dB.

It should be noted that, whatever mode of operation the unit is in, the same audio will be produced at every audio output of the unit, for example, any audio coming from the analogue output (if V6812 fitted), will also be embedded into the out-going SDI stream if the V6811's audio multiplexer is enabled.

In the default mode of operation, the unit outputs Glits-tone with a VALID test pattern. The tone may periodically be interrupted by an internally or externally generated voice ident.

## 4.4.5 Identifying V1681 and V6811 Tones

The Valid reader has a frequency discriminator for each channel in order to detect channel swaps.

The V1681 original SD Valid generator only generated two tones (A and B) at 997kHz and 440kHz. The HD generator generates four tones at any one time but at a different frequency for A to D and E to H. The tones for the SD generator and HD generator are depicted in the frequency spectrums (a) and (b) below. As can be seen the selection of tones for B, D, F and H are close to the SD generators B tone, and A, C, E, and G are close to the SD generators A tone. The frequency discriminator in the SD reader has a wider envelope than the HD reader as can be seen in the frequency responses depicted in (c) and (d) below. By separating the frequency of the tones in the two types of generator in this way we allow the SD reader to detect tones B, D, F and H from the HD generator as channel B, and A, C, E, and G as channel A. Also when the SD generator is used with the HD reader we can even tell the tones are coming from an SD generator. Knowing this, only swaps of two channel pairs can be detected thus we detect the tones as X and Y to differentiate them from A and B as generated by a HD generator.

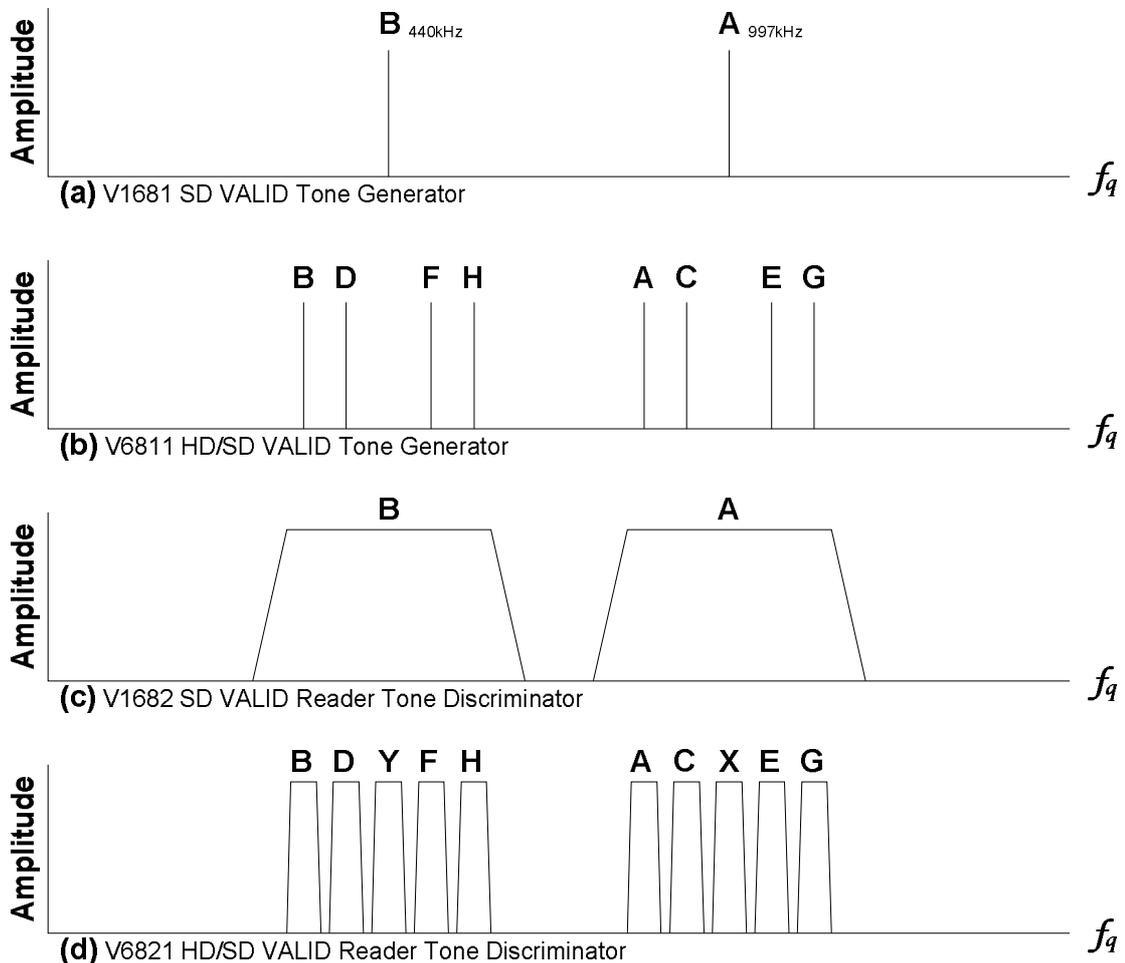


Figure 9 Frequency Spectra

## 4.4.6 Audio Idents (Internal)


In addition to the internally generated Glits tones the system (as long as it also has the V6812 fitted) can also generate audio identifications. These are pre-recorded announcements, stored as .wav files, that are downloaded from the CF card into the hardware. There can be separate files for each audio channel and they can be played out in time with the 4 second video sequence.

A particular feature of the Idents is that they can alternate with the Glits tones, so the audio can be used to both identify all the channels and to measure the timing. The tones and the idents are simultaneously available on the embedded, digital and analogue outputs.

There is a flexible relationship between the Glits tones and the idents and Figure 10 shows how they relate to one another. The audio O/P is usually selected to be solid tone or Glits tone but can also be a combination of Glits tone and the Ident. This is done under the AUDIO menu and when a selection of Glits and Ident IS MADE the choices are – **GL+ID 16**, **GL+ID 32**, **GL+ID 64** and **GL+ID 128**. This means that there will be a repeat rate of 16, 32 seconds etc. This repeat rate is always a multiple of the base 4 second cycle and is the total cycle time of the Glits plus the Ident.

Figure 10 traces A and B shows the timing relationship between the time Glits tone and the slot time for the Ident. Trace C shows how the Ident audio starts again on each cycle. If the audio is longer than the time slot allowed for it then it will be truncated, when it is shorter the remainder of the slot time is filled with silence, or optionally Glitz tone. Trace D shows the combined audio Glits tone with the Ident having silence between the end of the Ident to the end of the slot. Trace E shows the audio switching back to Glits tone immediately after the Ident in the **ID Auto** mode.

The Idents can be played once, as shown in trace C or continuously as shown in Trace F. This is set in the **IDENTS : ID Mode** menu which can be set to **ID Once**, **ID Loop**, or **ID Auto**. In all cases the Ident starts at the beginning of the cycle which may mean that the Ident gets cut off when playing in a loop as shown in Trace F. When a looping Ident is combined with the Glits there may be more truncation as shown in Trace G. When designing the Idents it is important to understand these timings and choose time slots accordingly.

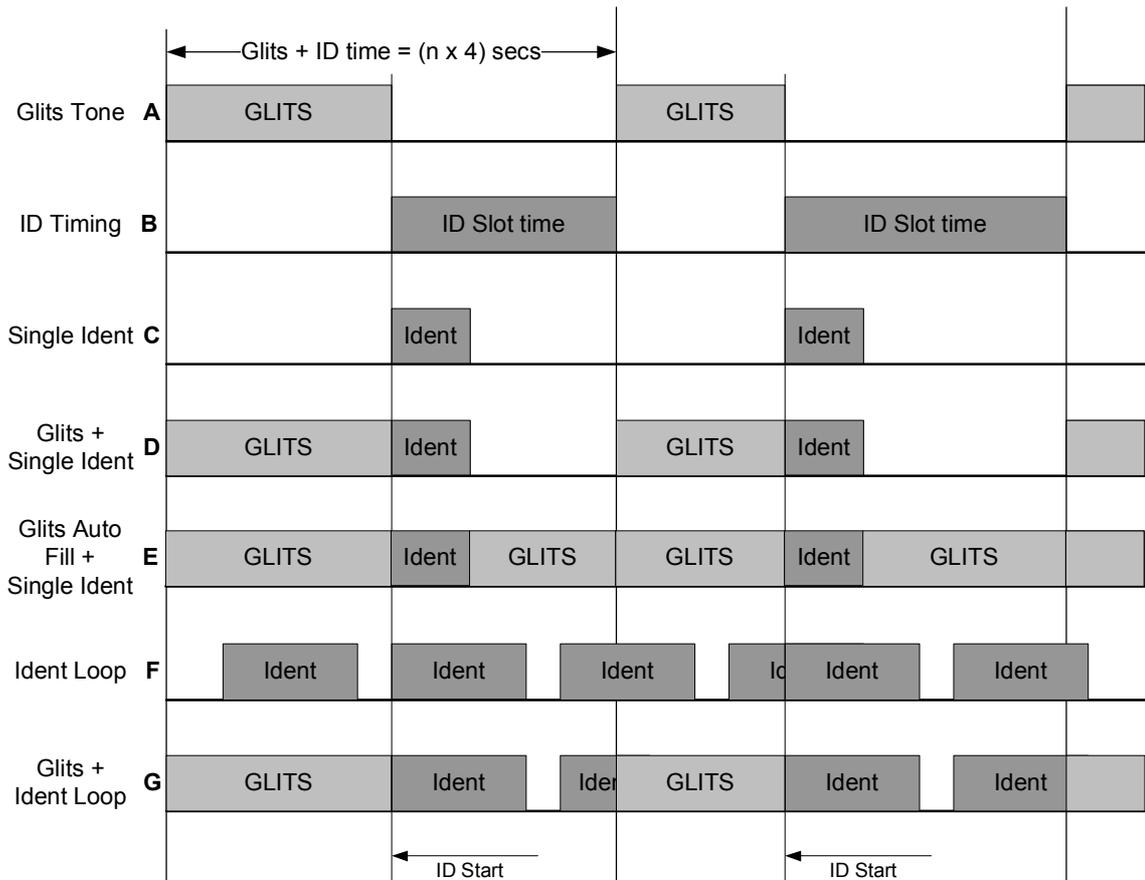

**Figure 10 ID Slot Timing**


As discussed in the Generator menu section the timings can be set in such a way as produce no Ident at all. For example the GL+ID time could be set to 16 secs while the ID Slot time is set to 32 secs which would allow 16 secs for the Glits after which it will reset to Glits again. There is no automatic warning for this condition. Therefore the GL+ID time should always be greater than ID Slot time.

#### 4.4.7 Audio Idents (External)

As well as generating the Audio Idents internally from the Compact Flash card they can also be inserted from the external inputs, either analogue or digital. The placing of them is the same as the internally generated Idents. However, if the external Idents are not running continuously then they need to be timed into the gaps in the Glits tone. To help with this there is a pair of sync connectors on the rear panel; see rear panels in section 2.1. On the generator external Idents are selected by setting ID Mode to ID Extn on the IDENTS menu.




The outgoing sync signal is timed to the Ident insertion and should be used to trigger the external Ident generator. The edges are always co-incident with the 4 second Black Flash sequence and the rising edge indicates the start of the audio Ident section. This is shown below in

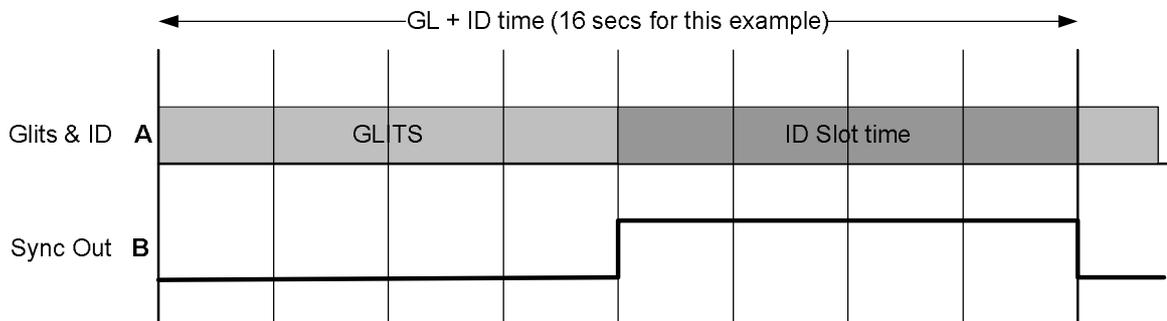

**Figure 11 Sync signal timing**

### 4.4.8 Audio Idents – Segments

In order to use the audio idents to identify up to the maximum of 8 channels per VALID Generator it is useful to be able to separate them in time. Even if two channels have an Ident saying “Channel X” “Channel Y” at the same time it may not be possible to distinguish them by listening to both. For this reason each Ident can be split up into a maximum of 17 segments. In a typical application with segments staggered in time segment 0 is the base segment and is played out on all channels at the start of the ID Slot time. The other segments are played out in sequence on the channel to which they belong with silence inserted between each part. The time allowed for each segment is the maximum length of all the segments. This is showed diagrammatically below in Figure 12 for 10 segments.

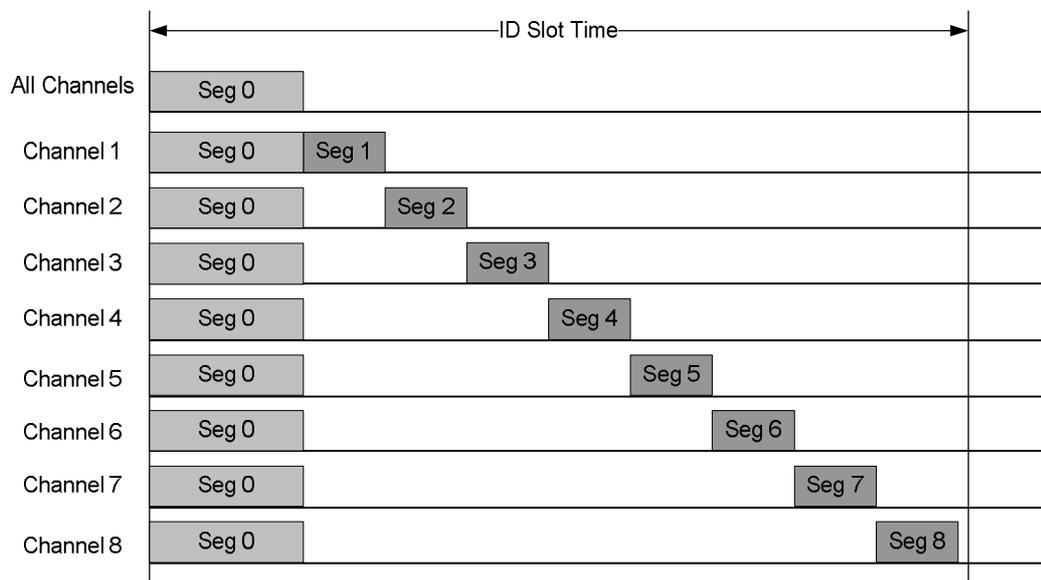

**Figure 12 Audio Idents with staggered Segments**

Interestingly this way of separating the actual idents is also useful when observing the outputs on PPM meters. The naturally progressing sequence is easily observed.

The CF card supplied with each V6812 audio part of the VALID Generator includes a default set of Idents with this feature and an application note on how to create .wav files for the Ident segments

The PC programme also supplied on the CF card with the Generator can be used to tie the wav files together in suitable segmentation. The supplied CF card already has a range of suitable wav file. The programme can also be used to define the video captions.



## 4.4.9 Audio Idents – .wav Files

The internal Ident system supports .wav files in mono, PCM, 16 bits and with sampling rates of 8kHz, 12kHz, 16kHz, 24kHz and 48kHz. The V6812 interpolates all Ident .wav files to the internal sampling rate of 48kHz for payout.

All internal Idents for the 8 channels being played out must have the same sampling rate selected from the list above. In other words channels A1 to D2 must have the same rate, and channels E1 to H2 must also have the same rate but it does not have to be the same as channels A1 to D2. This is because the two groups of eight are never played out at the same time.

The maximum length of each Ident that can be stored is shown in this table:

Sample Rate	Max length per Channel
8 kHz	48 s
12 kHz	32 s
16 kHz	24 s
24 kHz	16 s
48 kHz	8 s

## 4.5 Meter Displays

There are two types of meter display that can be overlaid onto the output of the Reader. One is the Delay Meter that shows the relative timing of the audio to the video for four audio channels in both a graphical, bar graph, form and text form. The other is a true real time PPM display of four audio channels. There is a choice of four types of PPM display – BBC, EBU types I and II and Nordic.

Normally the display shows one of each type of meter with the timing meters on the left and the PPM meters on the right. When doing this it is only possible to show the results for four of the channels and the operator must choose which four of the eight being monitored is to be displayed. Although the results from only four channels are being displayed all eight are still being measured and are available on the V6821 front panel and over the DART remote control system.

Figure 13 shows how the normal meter display looks.



Figure 13 Four Channel Delay Meter and PPM Display

With reference to Figure 13 it can be seen that there is more information than just the bars, particularly on the timing screen, than just the relative timing. The various parts of the display are described below:

**Audio Source** Bottom left hand corner indicates group number or AES, Analogue



**Audio Inversion** Down arrow on red background to the right of the detected audio channel



**Down-mixed stereo pairs** Letter 'M' on red background to the right of the detected audio channel



**Channel Swaps** Left panes indicate detected audio (left) in that channel (Right)



**Audio delay**

Horizontal bars and numeric indication in right panes



**Glits Tone Presence**

Latched symbol appears in the right panes when Glits tone is not present.



**VALID video Presence**


Indicated in the bottom right-hand pane with VALID ü, or VALID X



The PPM display shows the following information:

**Audio Not Present**

Channel letter at bottom of meter displayed on red background

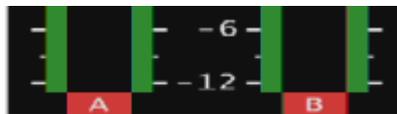

**Audio level**  
ballistics

Vertical meter available in Nordic, BBC or EBU Scale & Type I, or II

If the display is set to show all eight timing displays it will look like Figure 14 with the first four channels on the left and the second four channels on the right. This display shows Audios A, B, C and D. If the last four channels were selected it would then show E, F, G and H.



Figure 14 Eight Channel Delays

If the display is set to show all eight PPM displays it will look like Figure 15 with the first four channels on the left and the second four channels on the right. This display shows Audios A, B, C and D. If the last four channels were selected it would then show E, F, G and H. There is only one setting for the PPM ballistics which applies to both displays.



Figure 15 Eight Channel PPM Meters

## 5. BLOCK DIAGRAMS

### 5.1 V6811 Video Module

The V6811 basically consists of a video test pattern generator, audio tone generator, graphics generator, and audio multiplexer. The audio into the multiplexer can come from the V6812 or directly from the tone generator when no V6812 is used. The graphics generator produces the circle, video captions, and black flash. These can optionally be bypassed.

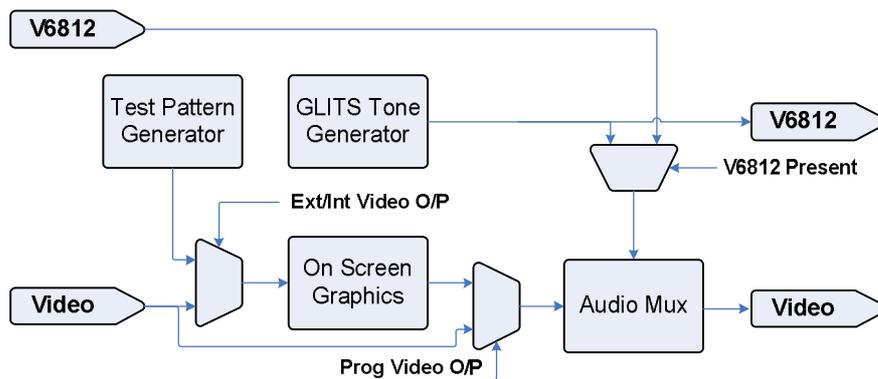


Figure 16 V6811 Block Diagram

### 5.2 V6812 Audio Module

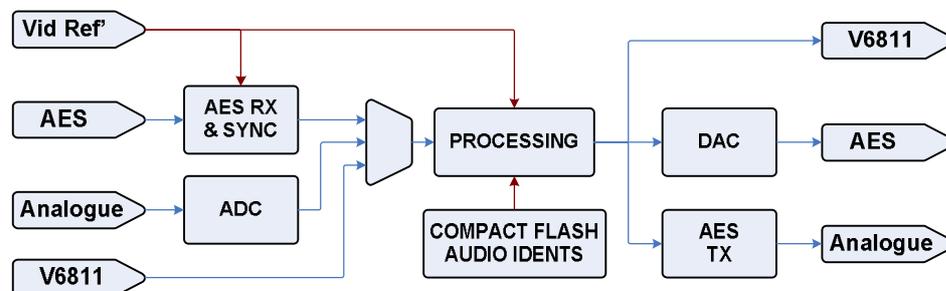


Figure 17 V6812 Block Diagram

On the diagram above, all audio routes are 8 channels (2 groups) wide.

When **AUDIO : Aud O/P = Ton-Glits** or **AUDIO : Aud O/P = Ton-Cont.** is selected on the V6811, the tone is generated on the V6811. The V6812 selects these tones as input and the tones have audio idents inserted – if this option is selected – and are returned to the V6811 for embedding in a video stream. The same signal as sent to the V6812 is also routed to the V6812's audio AES transmitter and DAC, and these signals are all delay matched. Therefore at any one time, embedded, AES and analogue signals all synchronised to the Black Flash video marker are available simultaneously.



## VISTEK V6811 / V6812 VALID Generator

When **AUDIO : Aud O/P = AUDIO I/P** is selected on the V6811, the V6812 selects an input from either the AES receivers or the on-board ADC. If The V6811 is set such that **AUDIO : Aud I/P = Analog**, the input to the V6812 is taken from the rear panel analogue input connectors and digitised by the ADC. If the V6811 is set such that **AUDIO : Aud I/P = AES**, the input to the V6812 is taken from the rear panel AES connectors and synchronised with the system video reference passed from the V6811. In either case, idents may be added to the signals, the signals are fed back to the V6811 for embedding, and co-timed audio is available simultaneously in embedded, AES or Analogue form.

## 6. SYSTEM OPERATION

### 6.1 A/V Ganged Control

Below is a diagram of the various video and audio output selection options. The two switches represented inside the dashed area show a ganged selection on the audio and video paths. When **VIDEO : Output** is set to **OP VALID** then normal operating conditions apply, with all currently selected A/V options applied. If **VIDEO : Output** is set to **OP Prog** then all options are bypassed except the **AUDIO : Aud I/P** selection and the program input is output with the selected audio input. This provides a way of switching the VALID generator A & V settings in and output of the program path under one control. When **VIDEO : Output** is set to **OP BYPAS** the single switch in the dashed box switches to bypass the all processing. This routes the SDI input directly to the SDI output keeping any embedded data that might be present on the input.

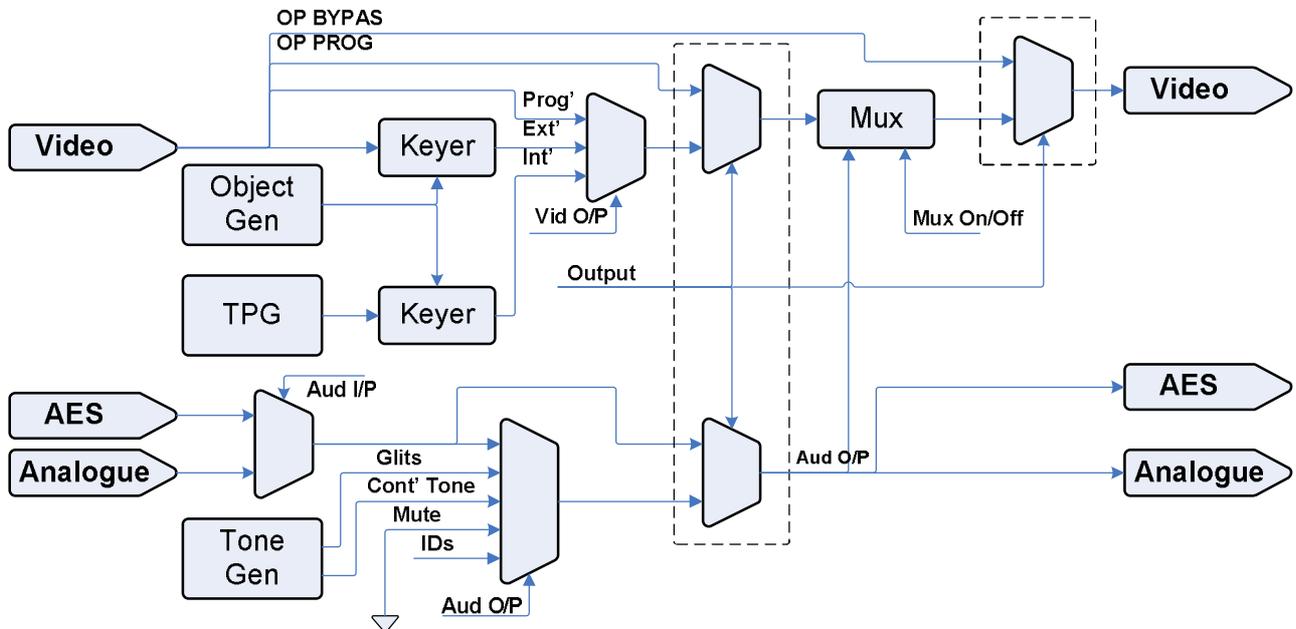


Figure 18 Video & Audio output Selection Options



## 6.2 Video Controls

### 6.2.1 Output Selection

The V6811 can optionally output an internally generated test pattern (**VIDEO : Vid O/P = VO Int**), or the SDI which is input to the module (the program). The program can be output cleanly (**VIDEO : Vid O/P = VO Prog**) or with all the on-screen elements, such as the circle and captions (**VIDEO : Vid O/P = VO Ext**). All the output selections are graphically represented in Figure 18.

The V6811 has two SDI inputs that can be selected by setting **VIDEO : Source** to **I/P 1** or **I/P 2**.

Note: To pass program's ancillary data set the **VIDEO : Anc Data** control to **Anc Pass** as opposed to **Anc Blnk**. But care should be taken not to pass groups that the V6811 is going to embed on.

### 6.2.2 Standard Selection

The V6811 will use the SDI input to determine at what standard to generate the test pattern. Alternatively the V6811 can be set to generate video at a specific standard. There are two controls to set the video standard

**VIDEO : O/P LStd** Set this control to the required line standard e.g. **1080i** or **720p**. Alternatively leave it set to **Vid I/P** for the input video to determine the line standard.

**VIDEO : O/P FldR** This control should be set to the required field rate. Alternatively it can be left set to **Auto**. In **Auto** the field rate is determined from the SDI input, or the external reference input if no SDI input is present.

Not all combinations of line standard and field rate conform to a video standard, if such a combination is selected a square character will blink to the far right of the front panel's display while in the **O/P LStd** and **O/P FldR** menu.

### 6.2.3 Test Patterns

A number of test patterns can be generated by the V6811. The output pattern may be altered in the **VIDEO : Pattern** menu. The V6811 generates the selected test pattern as a default setting (**VIDEO : Vid O/P = VO Int**).

The recommended test patterns for normal use are the colour bars, however all test-patterns may be used for audio/video delay measurement. Captions, centre circle and source information can also be inserted into all test patterns.

### 6.2.4 On-Screen Options

With the **VIDEO : Vid O/P** control set to **VO Int** or **VO Ext** there are a number of on-screen items present by default. Each of these can be turned off individually

**VIDEO : Flash** The black flash is the video timing indicator, turning it off means no delay measurement will be possible.

**VIDEO : Circle** The circle in the centre of the screen can be displayed with a comet tail or a red and green timing indication of the audio gaps (**Comet** or **RedGreen**). Alternatively it can be a static circle, or turned off completely (**Cir Stat** or **Cir Off**).

**VIDEO : Capt'n A/B/C/D** Video captions can be turned off individually as required by setting this menu to **Off**.

## 6.3 Audio Controls

### 6.3.1 Audio Selection

There are two audio inputs when the V6812 is used, AES and Analogue. The input to which the programs audio is connected can be selected in the **AUDIO : Aud I/P** control. With the audio input selected the audio to be output can be selected in the **AUDIO : Aud O/P** menu, the options are:

<b>Ton-Glts</b>	Glits tone from internal tone generator
<b>Ton-Cont</b>	Continuous tone from internal tone generator
<b>Aud I/P</b>	The selected audio input
<b>Mute</b>	Mute
<b>GL+ID 16</b>	Glits tone with audio Idents every 16 seconds
<b>GL+ID 32</b>	Glits tone with audio Idents every 32 seconds
<b>GL+ID 64</b>	Glits tone with audio Idents every 64 seconds
<b>GL+ID128</b>	Glits tone with audio Idents every 128 seconds
<b>ID Cont</b>	Audio Ident continuously

Two options are available for the internal tone generator. The Engineering control **ENG'ING : Tone-Set1** can be set to **TonVALID** or **Ton 1kHz**, making the tones as described in chapter 4.4, or setting all channels to the same frequency of 1kHz (actually 979.59Hz). All channels are generated in phase so can be viewed on a Lissa Jous curve to test a system for audio channel phase alignment.

Refer to section 6.4 for more details on audio idents.

### 6.3.2 Audio Multiplexer Controls

The selected audio is embedded onto the selected video output signal. This embedding process can be disabled by setting **AUDIO : Mux Enab** to **Mux off**. Two groups (1 & 2 or 3 & 4) can be embedded at any one time by selecting **AUDIO : Channels** to 'A-D/G1&2', or 'E-H/G3&4'. Note that when the channels control is changed, the embedding tone or Glits tone frequency will change slightly as detailed in section 4.4. The resolution of SD audio can be set to 20, or 24 bit using the **AUDIO : Mux Res** control.

Note: Audio groups present on the input SDI can be passed through to the program output if the **VIDEO : Anc Data** control is set to **Anc Pass**. This does mean that it is possible to then try to embed on a group that is already present, so care must be taken. What this does mean is present group pairs can be passed through the VALID system and not present group pairs may be added by the V6811/12.

### 6.3.3 MAL (Maximum Analogue Level) Set Up

The VALID system works in both analogue and digital domains, and therefore must be aware of the relationship between the two domains. The relationship is set up by specifying the maximum analogue level in dBu that may be represented in the digital system (MAL). This parameter is adjustable from +12 to +24dBu, and may be adjusted with the **AUDIO : MAL** menu option.

The VALID generator always generates a test tone level of 0dBu in the analogue and digital domains, however because the relationship between them is variable, the digital level with respect to full scale will change as the MAL control is adjusted. In order for correct level measurements to be made, both reader and generator must have the same MAL setting, OR a compensating gain must be applied when going between regions with different digital level representations.

It should be noted that when the unit is only using analogue I/O the MAL control still sets the internal headroom of the unit, so should still be set up correctly for the system.



## 6.4 Audio Idents

In many scenarios, where several audio channels are being monitored, it is useful to have voice identification of an audio source. For this purpose, audio idents can be generated from the V6812, or an external ident generator connected to the V6812. The audio can then be inserted at regular intervals into the tone sequence.

To provide external ident generator synchronisation, a TTL output is provided by the V6811 to trigger such a generator. The trigger signal is raised high for the entire duration of the that the V6812 is keying in ident audio. The external ID source must be connected to the main audio input as selected in the **AUDIO : Aud I/P** menu.

### 6.4.1 ID Selection

When video and/or audio idents are available via a Compact Flash fitted to the V6812 they can be selected in the **IDENTS : Video ID**, and **IDENTS : Audio ID** menus. Note, these two menu items will not be visible unless a Compact Flash with valid idents and appropriate initialisation file is installed, see section 12.

### 6.4.2 ID Timing

Both the length of the ID, and the rate of repetition are user adjustable. The rate of repetition can be set in the **AUDIO : Aud O/P** menu which has the following options :-

Ton-GLts
Ton Cont
Aud I/P
Mute
GL+ID 16
GL+ID 32
GL+ID 64
GL+ID128
ID Cont

This menu is where both ID is enabled, and the repeat rate is specified, so if **GL+ID 32** is chosen, the selected ID input will be inserted into the output test tone every 32 seconds etc. The default set up of the unit is to insert a 4s ident at the period specified.

The duration of the ident audio is also adjustable in the **ENG' ING : ID Slot** menu. This has options of 4,8,16 and 32 seconds.

It is important to note that if the two controls are set up in such a way that no tone will ever get generated, e.g. the if the **AUD O/P** control is set to **GL+ID 32**, and the **ID Slot** is set to **IDSLOT32** the **ID** time is always adjusted up so that it is greater than the **ID Slot** time. This is not enforced in the menu system.

## 6.4.3 External ID synchronisation

External audio ID generators can be synchronised to the insertion sequence by means of a TTL level signal generated by the V6811. The ID Sync output goes to a TTL logic high for the duration of the ident sequence, e.g. if **ID Time** is set to 16s, the ID Sync output will be raised to a TTL high for the full 16s, the rising edge marking the start of the ident sequence. So an external generator should be triggered from this rising edge.

The ID Sync output from the unit has a nominal impedance of 75Ω, but is expected to typically drive a high-Z TTL input. If the signal is terminated, it should be noted that the signal level will be halved, possibly causing threshold problems.

The sync output from one V6811 can be input to another V6811 to synchronise the timing of their black flash and GLITS tone sequence. The slave V6811 will also try to synchronise its sync output to the sync input so the same external audio ID source could be used for both modules. In order for this to work both modules will need to have the same ID timings set and share the same video reference.

For connection information see Section 2.1.

## 6.5 Caption Controls

Four user adjustable caption strings can be overlaid on the output video. The text, size, position and colour of these captions may all be altered from the front panel or remotely via the DART control system. A default set of captions are stored on the V6811, this can be edited via the front panel or remotely. Before any edited caption can be stored the **ENG'NG : Edit Cap** control must be set to **Enable**. When the V6812 is used 64 caption sets can also be stored and loaded from the Compact Flash memory. Figure 19 illustrates the storage location of the various captions, and how they can be loaded and stored from one place to another. The factory default caption set is loaded into the default caption EEROM on the V6811 module on the very first power up or when a factory reset is performed. The selected caption set is copied into volatile memory and is reloaded from the selected location on power up. If any changes are made to the selected caption set they will be lost if not stored before a power cycle. The selected caption set can be stored to the default caption set location on the V6811 module's EEROM or on the Compact Flash card.

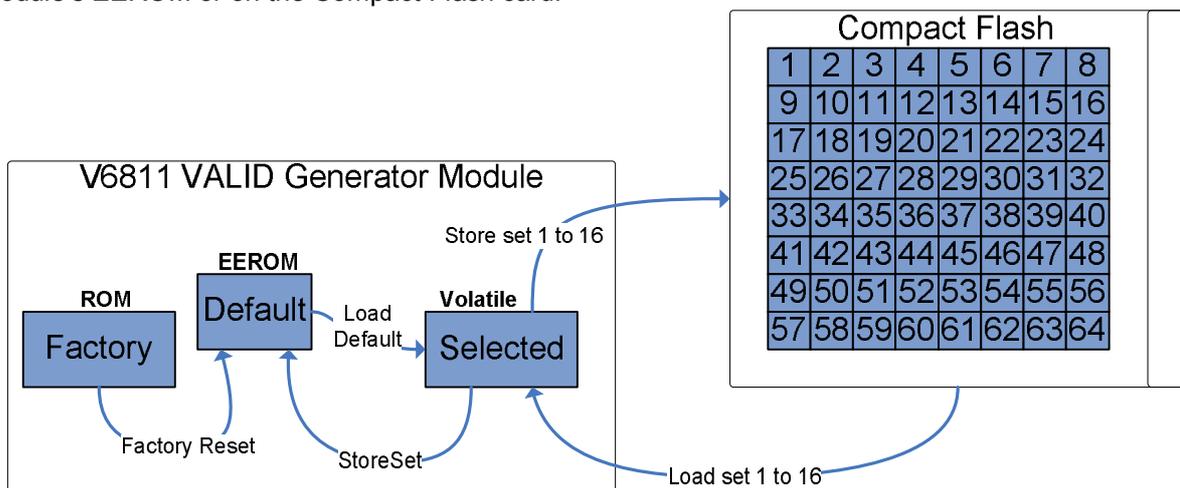


Figure 19 Caption Loading & Storing

## 6.5.1 Editing Caption Text (Local)

It is possible to edit the captions in Local control mode but it is slow and laborious. It is much better to use an external control panel, such as the V1602. If the V6812 Audio Generator is fitted the captions can all be edited on a PC and written to a CF card. The CF card can then be plugged into the V6812 and can be read. They can still be edited locally, but it is much slower.

Before editing the caption locally the feature must be enabled. This is done on the Engineering menu:

```

ENG' ING   Edit Cap   Disable
                                     Enable
    
```

This will be reset to 'Disable' after a reset or power down.

In Local mode captions are entered using the three front panel buttons after selecting **Text A, B, C, or D** in the **CAPTION** menu.

When editing the caption text, the **select** button is used to move along a character, and the **▼** and **▲** buttons are used to edit that character. The last character of the string should be a terminator, which, when displayed is a flashing  character and is the first character in all character sets, just before 'space' and 'A'.

When a terminator is inserted, all following text will disappear, however it will not be forgotten until the **Text** menu is exited. If the terminator is removed before exiting the **Text** menu, the further text will reappear. This enables overwriting of a long string with a shorter one without having to reset all following characters.

To minimise the number of button pushes, the character set has been broken into four sections: upper case, lower case, numbers, and symbols. To change character set, hold down the **▼** and **▲** buttons together. There are some characters which are common to more than one of the sets for ease of access e.g. brackets are included in both symbols and numbers. A full list of available characters is shown in the figure below.

When the character set is changed, the position in the list will be maintained e.g. if the current character is a capital 'E', changing set will move to a lower case 'e', changing again will move to the number '4' etc.

Capitals		A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
Lower Case		a b c d e f g h I j k l m n o p q r s t u v w x y z
Numbers		0 1 2 3 4 5 6 7 8 9 + - ( ) \
Symbols		. , : ; \ " ` ' ? ! # & @ \$ % ( ) [ ] { } * + - < = > / \ _

Figure 20 User caption character set

## 6.5.2 Position

Captions are always horizontally central to the picture, but the operator has control of the vertical positions, which can be found in the **CAPTIONS : Move A, B, C, or D** menu. There are 12 vertical positions that the text can occupy. When moving text, it should be noted that when one caption overwrites another, one will be partially or totally obscured.

Caption positions are limited to the top and bottom thirds of a picture, with position 1 to 6 being in the top third of the picture, and 7 to 12 in the lower third. This is so they are generally above or below the centre circle. This is quite important when it comes to viewing the output from the reader since the meters are placed to the left and right of the circle, and therefore will not obstruct the captions. It may be necessary to move large captions so they don't obstruct the circle.



## 6.5.3 Colour

Each caption has an individual colour assigned to it, all captions defaulting to white. The colour control can be found in menu **CAPTIONS** : **Colour A, B, C, or D**. The following colours are selectable :

White	Green
Black	Magenta
Yellow	Red
Cyan	Blue

## 6.5.4 Size

There are three sizes available for the captions : large, medium, and small, which can be adjusted in the **CAPTIONS** : **Size A, B, C, or D** menu option. For most instances the larger sized text will be most applicable, and is the default, however for longer messages e.g. web addresses or telephone numbers, a smaller font might be more applicable.



## 6.6 Status Menu

The status menu contains a collection of all the various card states for the V6811 and V6812 including information on inputs and includes version numbers of the various components that make up the modules.

### 6.6.1 V6811 States

The video standard of the selected video input, and the presence of both SDI inputs to the V6811 are reported along with the reference input standard and presence.

I/P Std	I/P 1	I/P 2	Ref I/P	Ref Std
---------	-------	-------	---------	---------

The Selected output standard is also available here for reference - O/P Std.

The V6811 monitors the selected SDI input for any audio groups that are present, this is reported back via the Aud Grp status. The Sync input is also monitored and its state can be found in Sync I/P.

### 6.6.2 V6812 States

The main purpose of the V6812 is to control the Compact Flash card and to provide audio inputs and outputs, thus these are the status that are provided here.

The Compact Flash presence, name, and version are available through these menu items.

CF State	CF Name	CF Ver
----------	---------	--------

The AES inputs that are present can be seen in the AES Stat menu item.

### 6.6.3 Version Numbers

Each module comprises various items of software/hardware and they all have separate version numbers. These can be read on the following read only menus:

STATUS	IOModule	ID n	V6811 IO daughter module type
STATUS	V H8 S/W	XX.XX.XX	Main V6811 processor software version
STATUS	V FPGA	XX.XX	FPGA Code
STATUS	V CPLD	XX.XX	CPLD Code
STATUS	V PCB	XX.XX	The V6811 PCB revision, with Mod status
STATUS	V Boot	XX.XX.XX	Boot Loader
STATUS	A H8 S/W	XX.XX.XX	Main V6812 processor software version
STATUS	A DSP	XX.XX.XX	V6812 DSP software version
STATUS	A FPGA	XX.XX	V6812 FPGA Code version
STATUS	A CPLD	XX.XX	CPLD Code
STATUS	A PCB	XX.XX	V6812 base-module PCB version number
STATUS	A Boot	XX.XX.XX	Boot Loader

## 6.7 Engineering Controls

### 6.7.1 EDH (SD operation only)

EDH is a method of embedding data within the ancillary data space that carries a measurement of the integrity of video and other data. By regenerating the equivalent measurement at the receiving end it is possible to check that the data has been received correctly.

HD signals always have the EDH data in form of checksums embedded, but for SD signals it is optional. On the V6811, the EDH on the output can be disabled on the **ENG'ING : O/P EDH** menu. Care must be taken if the new EDH generation is disabled and the old EDH is being passed through because it will probably not correctly represent the data. In this case the Ancillary Data really ought to be blanked.

### 6.7.2 Free-Run

There is a voltage controlled crystal oscillator, which is usually locked to the external video reference or to the input video. The clock from this oscillator is what clocks the SDI output video. This control provides direct control over the selection of the source of the oscillator's reference. When set on the oscillator will free-run at its mid frequency point. It is not recommended to change this control from its default off state.

### 6.7.3 Continuous Tone

Continuous tone mode is selected in the AUDIO menu **AUDIO : Aud O/P = Ton Cont.**

### 6.7.4 Wide Screen Signalling (WSS)

WSS signal is inserted into the generated 625i50 SD video signal when this option is on. The setting of the aspect ratio (**VIDEO : Def AR**) is conveyed within the WSS signal.

### 6.7.5 Video Index (VI)

VI signal is inserted into the generated 525i59 or 625i50 SD video signal when this option is on. The setting of the aspect ratio (**VIDEO : Def AR**) is conveyed within the VI signal.

### 6.7.6 Caption Edit Lock

In order to protect the video idents (text captions) from accidental editing the **Edit Cap** control in the Engineering menu defaults to **Disable**. This control must be set to **Enable** before a caption edit may be stored.

### 6.7.7 ID Channel Load Selection

Up to 16 channels of audio idents can be loaded from the Compact Flash to the V6812 when configured to do so in the initialisation file. This can take some time, particularly for lengthy high sample rate WAV files. Since only 8 channels (A to D, or E to H) can be output at any one time a control is made available to limit the loading of the ident audio from the Compact Flash. The control **ENG'ING : LoadIDCh** defaults to **All A-H** loading all the configured channels, loading can be limited with the **A-D**, and **E-H** options. Note that not all channels need to be configured in the initialisation file. If the only channels configured are A to D, only those will be loaded from the Compact Flash.

If a set of channels is not loaded and there is an attempt to play them then the V6812 will play whatever was last loaded for these channels.



## 6.7.8 ID Select

It is possible to select an audio ident from a list of up to 65, and the same is true for the selection of the video ident. If idents are organised in such a way that an audio ident is related to a particular video ident the selection can be ganged so that changing the video or audio ID in the **IDENT** menu will change both audio and video idents to that ID selection. The menu item **ENG' ING : IDselect** can be set to **Separate** or **Ganged**.

## 6.7.9 Display Sleep

Since, for the vast majority of its life, a module will operate behind the front panel of a rack frame, the display on the local front panel will not be visible so it will go to sleep after a certain time. This timeout delay can be changed on the **ENG' ING : Sleep** menu to be anything between 0 and 30 minutes; 0 minutes means that it will stay on indefinitely. The sleep timeout always counts from the last front panel button push. The default time is 5 minutes.

The panel can also be forced into its sleep mode by moving up a level from the Top Level menu, which displays the module type.

To get the display to come on again simply press one of the buttons and the menus will start again at the Top Level.

## 6.7.10 Display Brightness

The brightness of the front panel display can be adjusted on the **ENG' ING : LEDLevel** menu.

**ENG' ING    LEDLevel    █ █ █ █**

## 6.8 Config Controls


### 6.8.1 GPI control

GPI control is only available when the V6812 is used with the V6811 due the connections for the GPI being on the V6812. There are two external GPI inputs so that external hardware can simply select certain parameters. Connecting a GPI input to 0v activates the GPI, leaving it at +5V de-activates it. The status is shown in the STATUS menu as **GPI ↑** or **GPI ↓**, the former being active and the latter inactive (despite the fact that connecting it to 0v makes it active).

The pin numbers on the high density D-type and Screw Clamp connectors are in this table:

Signal	HD Type	Screw Clamp
GPI 1	Pin 24	Pin 1
GPI 2	Pin 23	Pin 2
GND	Pin 10	Pin 3
+5V	Pin 22	Pin 4

The screw clamp pins can be connected to the controlling relay as shown below in Figure 21.

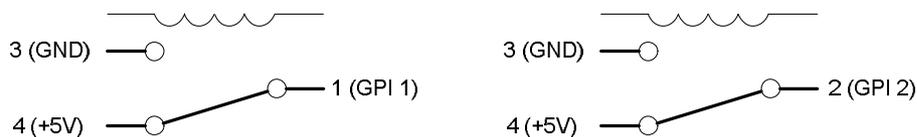

**Figure 21 GPI Relay Connections**

Various functions can be selected for each of the GPIs and there is no difference between them, other than that there is a priority GPI 1 (highest) and GPI 2 (lowest). Thus if the two GPI input controls conflict, GPI 1 will win.

The GPI controls are set up in the three **CONFIG : GPI X** menus where **X** represents **1**, or **2**. The options available are :

Display	Function
GPIx Off	GPI disabled (default)
Cap A	Caption A on
Cap B	Caption B on
Cap C	Caption C on
Cap D	Caption D on
Program	Force Output to OP Prog
Vid Byp	Force Vid O/P to Program
Aud Byp	Force Aud I/P to Aud O/P
16x9 SD	Display 16x9 Circle for SD
SDI2 sel	Select 2 <sup>nd</sup> SDI input.
OP BYPAS	Force OUTPUT to OP BYPAS

NOTE: There is no protection on these inputs. Damage can be caused to the V6812 if a voltage greater than +5 Volts is applied.



## 6.9 Compact Flash Control

There is a Compact Flash slot available on the front panel of the V6812 which allows the user to add and manage the audio and video idents. The Compact Flash should contain all the audio files required (.WAV files), the video identifier files (a .txt file with the caption text), and an initialisation file that ties all the files together with ident numbers and names for each ident set. The initialisation file is a text file saved with the name VALID.INI.

All audio Ident .wav files, video caption files and the VALID.ini initialisation file must reside in the root directory of the CF card. Although the card is fully compatible with a PC directory system the V6812 cannot work down a directory tree.

The details of the Compact Flash file structure and how to use it for an upgrade are given later in Sections 12.

A PC programme is available for creating the CF files and the instructions are in Section 12.2

The Compact Flash can also be used as a means of updating the V6812's Compact Flash sub-system software, and the details are also in Section 12.3.



## 7. CALIBRATION

---

### 7.1 Set-Up

There is a separate Main Level Menu for Calibration and this should be used throughout. The first sub-level menu is Cal Mode, which can be used to turn calibration ON:

```
CALIB      Cal Mode  Cal Off
                        Cal On
```

The calibration mode must be turned ON before any parameter can be adjusted. The calibration mode will be turned OFF in one of four ways:

1. Manually on the **CALIB : Cal Mode** menu
2. By going up to the Top Level Menu
3. By re-powering the unit.
4. By letting the display timeout and go to sleep mode.

When the calibration mode is ON then the unit will automatically set up the required conditions in the unit as you enter each sub-menu. For example, if you go into the CntrFreq sub-menu, the unit will automatically go into free run. For obvious reasons this should not be done on a unit that is being used On Air.

### 7.2 Free-Run Frequency

There is a voltage controlled crystal oscillator, which is usually locked to the external video reference or to the input video. However if there is no input or reference then it will free-run and this free running frequency should be set. The oscillator is not accurate enough to be used as a frequency reference, but nevertheless, should be set close to the ideal so that any succeeding SDI equipment will be able to lock to its output, and so that when in free run it will only drift slowly away from its starting reference.

To calibrate the frequency set the unit into Free Run by turning Cal Mode ON and selecting the CntrFreq sub-menu.

```
CALIB      Cal Mode  Cal On
```

Now compare the output picture movement on a monitor with an accurate external reference and adjust the frequency accordingly.

```
CALIB      CntrFreq          Range is -127 to +128
```

The setting is stored on the unit in non-volatile memory, and should not need regular adjustment.



## 7.3 Analogue Audio I/O

The analogue audio I/O of the V6812 audio module requires calibration to 'trim out' the small errors in the components. It is not the same as the MAL setting discussed in section 6.3.3. The module is calibrated at the factory and should not require recalibration under normal circumstances. However, should recalibration become necessary, it may be undertaken by the user provided the requisite equipment is available

The ADC and DAC sections are adjusted separately, and may be done in any order.

The calibration values relate directly to the V6812's sub-module and not the main board, and they are stored on the sub-module itself. This means that there is no need to re-calibrate a sub-module if it is moved from one board to another.

### 7.3.1 DAC

By turning Calibrate Mode ON and selecting one of the DAC sub-menus the unit will automatically generate a -18dBFS tone with an MAL of +18dBu.

To calibrate the frequency set the unit to generate Tone by turning Cal Mode ON and selecting one of the DAC sub-menus.

CALIB      Cal Mode    Cal On

Connect the outputs in turn to a high quality analogue audio analyser and adjust each of the eight channels for 0dBu on:

CALIB      DAC A1  
CALIB      DAC A2  
CALIB      DAC B1  
CALIB      DAC B2  
CALIB      DAC C1  
CALIB      DAC C2  
CALIB      DAC D1  
CALIB      DAC D2

### 7.3.2 ADC

Turn Calibrate Mode ON and select one of the ADC sub-menus.

CALIB      Cal Mode    Cal On

Connect the Analogue inputs from a high quality dual domain audio generator to the inputs at +16dBu and the AES outputs to an analyser. Set MAL to +18dBFS, and adjust the level on the AES outputs to -2dBFS.

CALIB      ADC A1  
CALIB      ADC A2  
CALIB      ADC B1  
CALIB      ADC B2  
CALIB      ADC C1  
CALIB      ADC C2  
CALIB      ADC D1  
CALIB      ADC D2

## 8. CONTROLS

---

These tables show a complete list of all the parameters that can be controlled locally for the various configurations. Unless otherwise shown they can also be controlled over the DART remote control system. Not all menus are available at any one time, since they depend on module configurations and sometimes on the operating conditions. Entries marked with a  $\bar{u}$  in the V6812 column are only available when the V6811 is used with a V6812.

The tables also show the full range of the controls and their ranges and normalised value, if appropriate. The normalised value or setting is shown by the 'n'.



## 8.1 Video Controls – VIDEO

Main Menu	Sub Menu	Value		Comment	V6812
VIDEO	Output	OP VALID	n	Output video as per controls	
		OP PROG		Output Program input & Audio	
	Vid O/P	VO Int	n	Output Test Pattern	
		VO Ext		Output Program with objects	
		VO Prog		Output Program with no objects	
	Pattern	100% Bar	n		
		75% Bar			
		SDI Matr			
		X - Hair			
		Ramp			
		White FF			
		Black FF		Do not use for delay measurement	
	Source	I/P 1	n		
		I/P 2			
	Flash	Flsh On	n		
		Flsh Off			
	Circle	Comet	n		
		RedGreen			
		Cir Stat			
		Cir Off			
	Capt'n A	A On	n	Video ident controls	
		A Off			
	Capt'n B	B On	n		
		B Off			
	Capt'n C	C On	n		
		C Off			
	Capt'n D	D On	n		
		D Off			
	O/P LStd	Vid I/P	n	Get line standard from Program	
		525i			
		625i			
		1080i			
		720p			
		576p		Not implemented	
		1035i			
		1080sf		Not implemented	
	1080p		Not implemented		
	O/P FldR	Auto	n	Get Field Rate from reference	
		59.94Hz			
		50Hz			
		60Hz			
		24Hz			
		25Hz			
		29.97Hz			
		23.98Hz			
		30Hz			
	Anc Data	Anc Blnk	n	Clear ancillary data on program	
		Anc Pass			
	Norm	*****			

## 8.2 Audio Controls – AUDIO

Main Menu	Sub Menu	Value		Comment	V6812
AUDIO	Aud I/P	AES	n	Select Program Audio I/P source	C
		Analog			C
	Aud O/P	Ton-GLts	n	Output GLITS tone	
		Ton-Cont		Output continuous tone	
		Aud I/P		Output Aud I/P	
		Mute		Mute audio outputs	
		GL+ID 16		GLITS with idents every 16 sec's	
		GL+ID 32			
		GL+ID 64			
		GL+ID128			
		ID Cont		Output idents continuously	
	Mux Enab	Mux On	n	Enable audio multiplexer function	
		Mux Off			
	Channels	A-D/G1&2	n		
		E-H/G3&4			
	MAL	+18dB	n	Maximum Analogue Level	
		+12dB .. +24dB			
	Mux Res	20 bit	n		
		24 bit			
	Norm	*****			

## 8.3 Ident Controls – IDENTs

Main Menu	Sub Menu	Value		Comment	V6812
IDENTS	Video ID	Default	n	Default stored on V6811 NVRAM	C
		Name1		Selection from Compact Flash	C
	Audio ID	None	n	No audio Ident selected	C
		Name1		Selection from Compact Flash	C
	ID Slot	IDSslot 4	n	Audio idents 4 sec's long	C
		IDSslot 8/16/32			C
	ID Mode	ID Once	n	Play ident one	C
		ID Loop		Loop ident continuously	C
		ID Auto		Play ident once then revert to tone	C
ID Extn		Ident source is external	C		



## 8.4 Caption Controls – CAPTIONS

Main Menu	Sub Menu	Value		Comment	V6812	
CAPTIONS	Text A	AaBb...	n	Default is "Pro-Bel Limited"		
	Move A	A 1-12		Caption vertical position.		
	Colour A	White		n		
		Black				
		Yellow				
		Cyan				
		Green				
		Magenta				
		Red				
		Blue				
	Size A	Large		n		
		Medium				
		Small				
	.. B,C&D					
	StoreSet*	Default		n	Captions local to V6811	
01: None				Sets stored on V6812's CF		
nn: None				65 Max		
Norm	*****					

\* Press 'Select' button for short time to store edited caption to that caption set. Remember that **ENG'ING : Edit Cap** must be set to **Enable**.



## 8.5 Operating Conditions – STATUS

Main Menu	Sub Menu	Value	Comment	V6812
STATUS	Variant	V6811	VALID Generator	
	V6812	Attached	V6822 Audio I/O module attached	
		None		
	CF Stat	NoCFCard	No Compact Flash card in V6812	
		CF Valid	INI file found on CF card	
	CF Name	None	Volume name given to INI file on the CF	
	CF Ver	01.00	Version of the V6812's Compact Flash Sub-system software	
	I/P Std	720p59		
		↓		
		Unknown		
	I/P 1	No Input		
		I/P 1 x		
	I/P 2	I/P 1 4		
		I/P 2 x		
	Ref I/P	I/P 2 4		
		REF x		
	Ref Std	REF 4		
		720p		
		↓		
	O/P Std	Unknown		
		No Input		
		720p		
	Aud Grps	↓		
		None	No audio groups present on I/P	
		1 - 3 -	Groups 1 & 3 present on I/P	
	AES Stat	↓		
		1 2 3 4		
	Sync I/P	AxBxCxDx		
	GPI STAT	Sync x/Ü		
	Mem Size	1: 2:	GPI active (up arrow) state indication	
		24MBytes	Must have 96Mbytes fitted	
		48Mbytes		
		96Mbytes		
	VModule	None		
	IOModule		Processing module ident (0-7)	
	V H8 S/W		I/O module ident (0-3)	
	V FPGA		V6811 Software version number	
	V CPLD		V6811 FPGA Version number(BCD)	
	V PCB	nn . nn	V6811 CPLD Version Number(BCD)	
	V Boot		V6811 PCB Rev.HW Rev (nn = 00 .. 15)	
	A H8 S/W		V6811 Bootloader version number	
	A DSP		V6812 Software version number	
A FPGA		V6812 DSP Software Version		
A CPLD		V6812 FPGA Version number(BCD)		
A PCB	nn . nn	V6812 CPLD Version Number(BCD)		
A Boot		V6812 PCB Rev.HW Rev (nn = 00 .. 15)		
		V6812 Bootloader version number		



## 8.6 Engineering – ENG'ING

Main Menu	Sub Menu	Value		Comment	V6812	
ENG'ING	O/P EDH	EDH On	n	Only when O/P is SD		
		EDH Off				
	Free-run	Free Off	n			
		Free On				
	Tone-Sel	TonVALID	n	All tones are VALID tones		
		Ton 1kHz		All tones are all 1kHz tones		
	WSS En	WSS On	n	Wide Screen Signalling Insertion On		
		WSS Off		Only inserted for 625i50		
	VI En	VI On	n	Video Index Insertion On		
		VI Off		Only inserted for SD Standards		
	Edit Cap	Disable	n	Lock captions from editing		
		Enable		Release captions for editing		
	LoadIDCh	All A-H	n	Load all channels in INI file		Ü
		A-D		Load only A to D		
		E-H		Load only E to H		
	IDSelect	Separate	n	Enable A & V idents separately		
		Ganged		Gang A & V ident selection		
	ID Lock	Lock Off	n			
		Lock On				
	Sleep	0 min		Sleep mode off		
n min			Time before going to sleep state – default 5 min			
LEDLevel			Shown as bar graph			
Norm		*****				

## 8.7 Calibration – CALIB

Main Menu	Sub Menu	Value		Comment	V6812
CALIB	Cal Mode	Cal Off		Changing calibration parameters disabled	
		Cal On		Changing calibration parameters enabled	
	CntrFreq	-127->+128			
	ADC A1	-127->+128			C
	ADC A2	-127->+128			C
	ADC B1	-127->+128			C
	ADC B2	-127->+128			C
	ADC C1	-127->+128			C
	ADC C2	-127->+128			C
	ADC D1	-127->+128			C
	ADC D2	-127->+128			C
	DAC A1	-127->+128			C
	DAC A2	-127->+128			C
	DAC B1	-127->+128			C
	DAC B2	-127->+128			C
	DAC C1	-127->+128			C
	DAC C2	-127->+128			C
	DAC D1	-127->+128			C
	DAC D2	-127->+128			C
	Norm		*****		



## 8.8 Configuration – CONFIG

Main Menu	Sub Menu	Value	Comment	V6812
CONFIG	GPI 1	GPIx Off	GPI disabled (default)	
		Cap A	Caption A on	
		Cap B	Caption B on	
		Cap C	Caption C on	
		Cap D	Caption D on	
		Program	Force Output to OP Prog	
		Vid Byp	Force Vid O/P to Program	
		Aud Byp	Force Aud I/P to Aud O/P	
		16x9 bar	Generate 16x9 Circle	
		4x3 bar	Generate 4x3 Circle	
		SDI2 sel	Select 2 <sup>nd</sup> SDI input.	
		OP BYPAS	Force OUTPUT to OP BYPAS	
		GPI 1	GPIx Off	GPI disabled (default)
	Cap A		Caption A on	
	Cap B		Caption B on	
	Cap C		Caption C on	
	Cap D		Caption D on	
	Program		Force Output to OP Prog	
	Vid Byp		Force Vid O/P to Program	
	Aud Byp		Force Aud I/P to Aud O/P	
	16x9 bar		Generate 16x9 Circle	
	4x3 bar		Generate 4x3 Circle	
	SDI2 sel		Select 2 <sup>nd</sup> SDI input.	
	OP BYPAS		Force OUTPUT to OP BYPAS	
	Banner		On	Warning banner displayed in sleep state
		Off		
	DefIpStd	720p59	Enter required default standard	
	Password	0..99999	For factory & maintenance options	
	SD/HD Op	Auto	Adapts to SD or HD I/P	
		HD	Fixed for HD I/P	
		SD	Fixed for SD I/P	
	V SetPCB	0..15	Maintenance password protected	
	V SetH/W	0..15	Maintenance password protected	
	A SetPCB	0..15	Maintenance password protected	
	A SetH/W	0..15	Maintenance password protected	
	TestMode	Off		
		On	TEST menu enabled	
	Factory	Mode Off	Maintenance password protected	
		Mode On		



## 9. TROUBLE SHOOTING GUIDE (FAQ)

---

This section is to be a help in solving some common difficulties. If there is no control from the front panel first check that the Rem/Local switch is set to *Local*.

**Q: My V6811 produces no output, although a valid SDI video signal is connected to one of its inputs and Output is set to Program.**

A: 1. Check whether the Front Panel HD/SD LED is lit. This indicates that a signal is being received.  
2. Check whether the Input selection is set correctly. VIDEO : Source = I/P 1 (or I/P 2)  
3. Make sure that the mode of operation (SD/HD) matches with your Input Standard.  
Set to 'Auto' sensing if in doubt. CONFIG : SD/HD Op = Auto

**Q: There is no output from the external audio.**

A: Check that you have correctly connected and selected either analogue or AES audio. On both the VALID Generator and Reader there are completely separate connections and they must be selected with either local or remote control.

**Q It seems that embedded Audio data does not get passed through when the program is selected as the output (in fact, no Ancillary data whatsoever).**

A Check whether the Anc Data enable control is set properly. VIDEO : Anc Data : Anc Pass

**Q The output generated by my V6811 looks corrupt.**

A 1. Make sure that the selected Output Line Standard (VIDEO : O/P LStd) and the Output Field Rate (VIDEO : O/P FldR) are a compatible combination. An invalid combination is indicated by the far right character blinking while in either control.  
2. Check the field rate of the reference or SDI input (if present), and ensure it is compatible with the selected output standard.

**Q The display never goes to sleep.**

A Check whether the Sleep delay has been set to 0 Mins, which means stay awake.

**Q** When the GL+ID time is decreased there is no change in the duration of the Glits timing.

**A** This is probably because the ID Slot time is set too high and is encroaching on the Glits timing. See section 4.4.6.


## 10. INITIALISATION & ERROR CODES

Every time a board goes through a power-on cycle, either by re-seating the board in the rack or by triggering the manual reset, a sequence of initialisation and self-test events is being carried out by the on-board microcontroller.

If anything goes wrong, an error message is shown on the front panel display and program execution halts. The following table shows the error messages and their meaning:

Flash upgrading	ERROR 01	Flash erasing failed
	ERROR 02	Flash programming failed
	ERROR 03	Main program checksum error after programming
	ERROR 04	Bootloader checksum error after programming
	ERROR 05	No program loaded and no valid upgrade in Flash Stick
	ERROR 06	Bootloader upgrade required but no valid bootloader upgrade in Flash Stick
FPGA Load	ERROR 07	STATUS stayed low after CONFIG pulsed low
	ERROR 08	DONE stayed high after CONFIG pulsed low
	ERROR 09	STATUS went low during configuration
	ERROR 10	DONE stayed low after configuration
Local EEPROM	ERROR 11	Error writing to local EEPROM
	ERROR 12	Error reading from EEPROM
	ERROR 13	Initialising EEPROM to default data
	ERROR 14	Initialising parameters to default data
Debug Port	ERROR 15	Receive buffer overflow
	ERROR 16	Receive overrun
	ERROR 17	Receive framing error
	ERROR 18	Receive parity error

## 11. MENU TREE

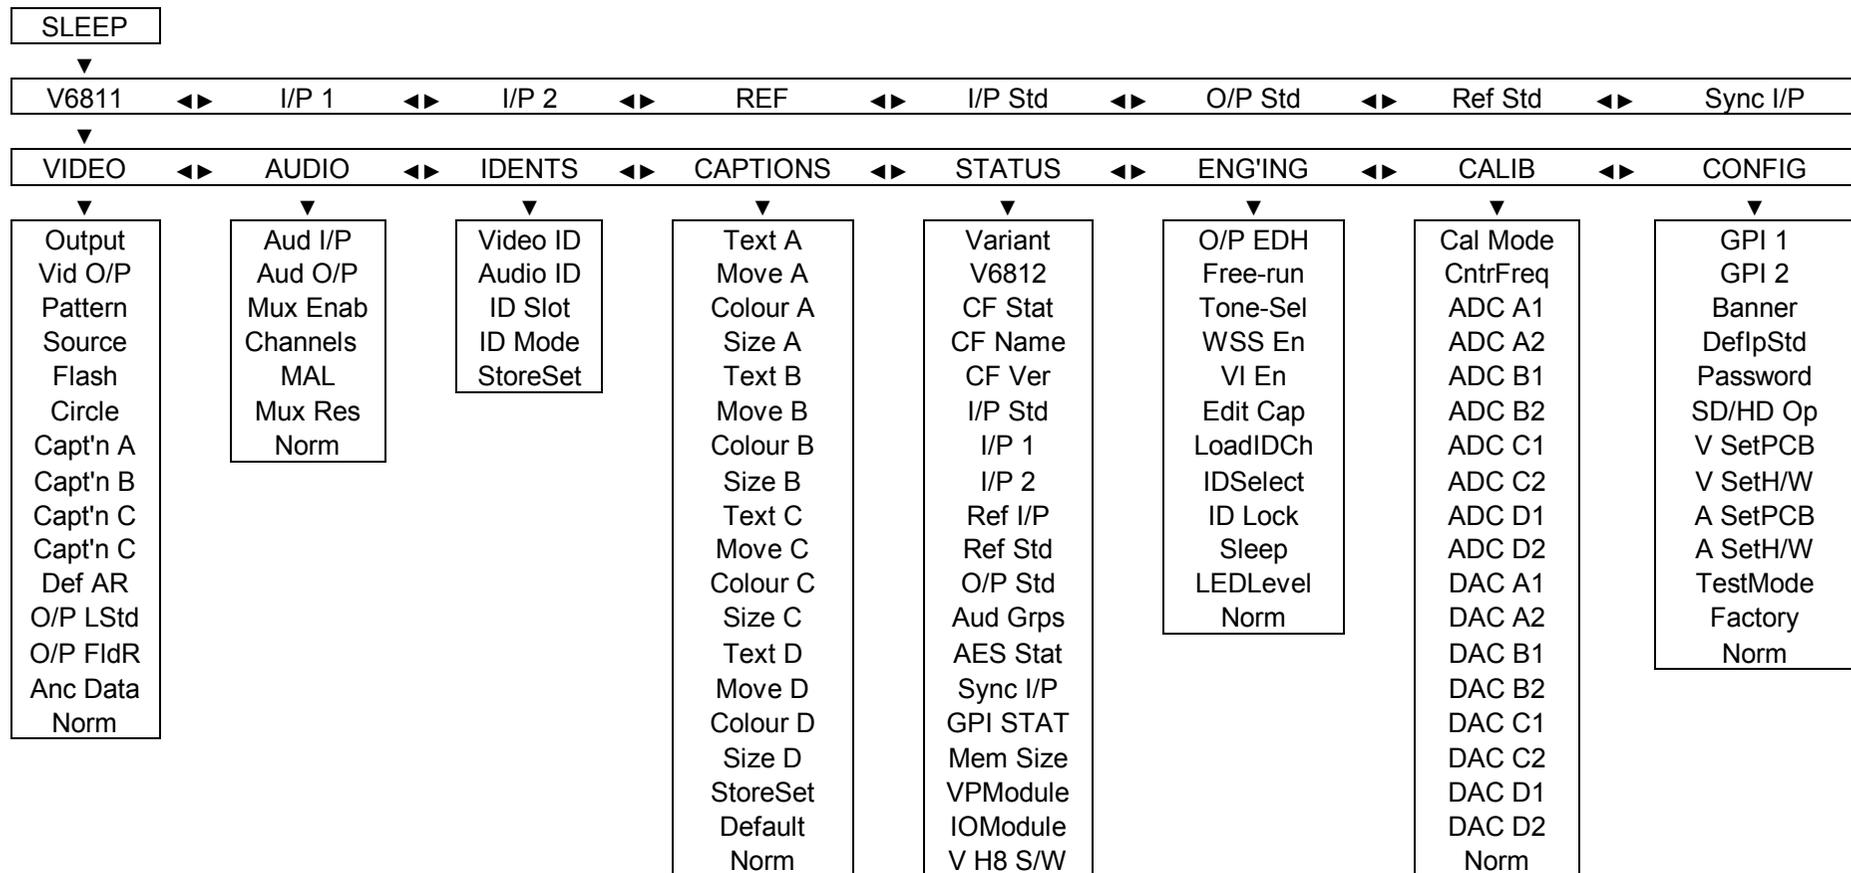

# VISTEK V6811 / V6812 VALID Generator

...Continued

VIDEO	◀▶	AUDIO	◀▶	IDENTS	◀▶	CAPTIONS	◀▶	STATUS	◀▶	ENG'ING	◀▶	CALIB	◀▶	CONFIG
-------	----	-------	----	--------	----	----------	----	--------	----	---------	----	-------	----	--------

- V FPGA
- V CPLD
- V PCB
- V Boot
- A H8 S/W
- A DSP
- A FPGA
- A SMFPGA
- V CPLD
- V PCB
- V Boot



# 12. Compact Flash Files

---

## 12.1 File Structure

This section describes the structure of the caption and audio files on the CF card. It has three parts – the .INI file, the video caption part and the audio ident part.

### 12.1.1 Initialisation file

The initialisation file maps the video ident files to specific ID set, and details the audio ident files used for all specified segments for each set.

[VALID]	Start of VALID.INI section header
Date=18/01/2007	File creation date
Time=15:00:030	File creation time
Version=1.0.0.0	Version of the VALID8.exe utility that was used to created the INI file
Name=VOL 1	Name of this VALID.INI configuration
NumIdentSets=3	Number of ident sets defined in this file
[Video1]	Section header for first Video ident entry
Name=CAPSET 1	Name for this ident
File=Caption1	Text file containing ident text
[Video2]	Section header for second Video ident entry
...	
[Audio1]	Section header for First Audio ident entry
Name=IDSET 1	Name for this ident
NumSegments=3	Number of segments each channels ident is split into
Audio000=channel	Channel A1's first segment audio source WAV file
Audio001=a	Channel A1's second segment audio source WAV file
Audio002=1	Channel A1's third segment audio source WAV file
Audio010=channel	
Audio011=a	
Audio012=2	
Audio020=channel	
Audio021=b	
Audio022=1	
...	
Audio150=channel	
Audio151=h	
Audio152=2	
[Audio2]	Section header for second Audio ident entry
...	

The structure of the INI file is shown above, but it is recommended that the VALID8 File Generator/Validator program is used to generate the INI file.



## 12.1.2 Video Identifiers

A simply formatted text file is used to hold the text for an ident. Each ident must have its own text file. The format is as follows:

```
<position>,<colour>,<size>,<text>  
<position>,<colour>,<size>,<text>  
<position>,<colour>,<size>,<text>  
<position>,<colour>,<size>,<text>
```

... for captions A, B, C and D in that order.

e.g.

```
1,3,0,Pro-bel Limited  
2,4,1,+44(0)118 986 6123  
10,5,2,VALID (Video Audio Lineup & ID)  
11,6,0,www.pro-bel.com
```

where position is 1-12, colour is 0-7, size is 0-2 and text is up to 59 characters + null.

## 12.1.3 Audio Identifiers

An audio identifier is a set of audio .WAV files for each of the 16 audio channels available in the VALID8 system. The identifier for each channel may be made up from up to 17 separate .WAV files, called segments. The .WAV file must be of the correct sample rate, format and sample size.

**Sample Rate** 8kHz, 12kHz, 16kHz, 24kHz, or 48kHz sample rates can be used. But all the .WAV files in a set must have the same sample rate.

**Format** PCM (uncompressed) mono.

**Sample Size** 16-bits.

## 12.2 File Creation

### 12.2.1 VALID8 INI File Generation Utility

This free utility available from Pro-Bel Ltd guides the user in making an initialisation file that collects all the text and WAV files together with the proper associations. It allows direct text entry for video ident text file creation, WAV file selection with the facility to play back the audio set, and a validation log that flags any errors found in the current initialisation file.

For further information see the utilities help files.

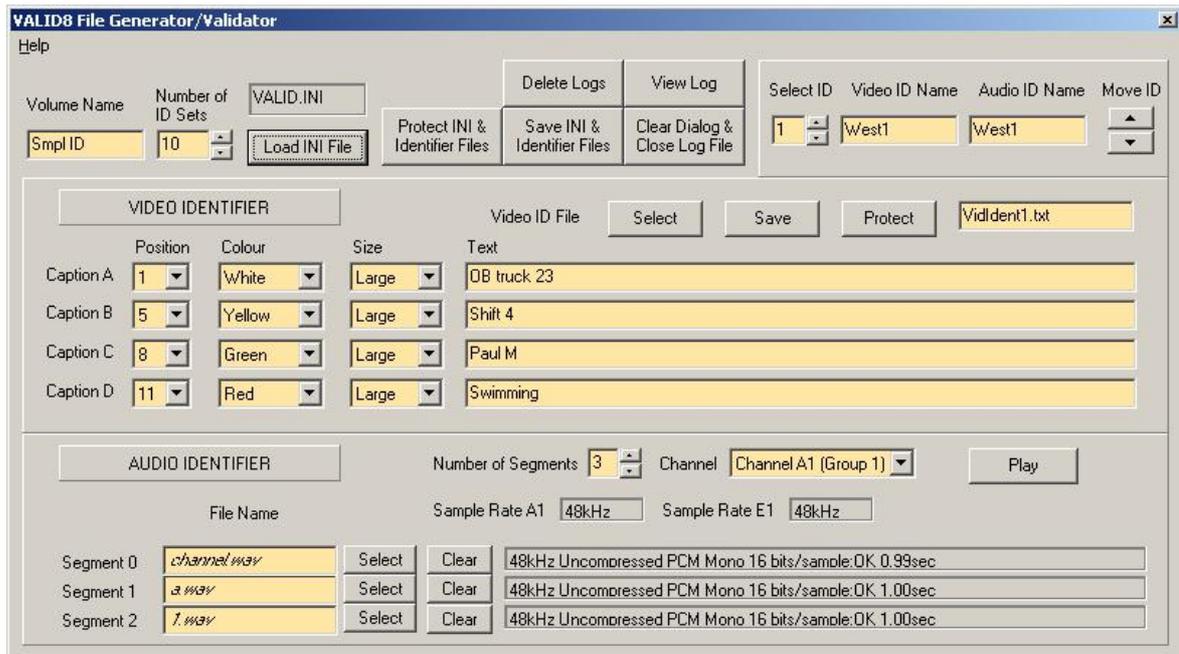


Figure 22 VALID8 INI File Generation Utility Screen Shot

## 12.3 Compact Flash System Software Upgrade

The V6812's Compact Flash sub-system software controls all the Compact Flash tasks and interfaces on the VALID generator. Occasionally improvements are made and it might be required to upgrade this software. This can be done very easily by following this procedure when an upgrade is received.

1. Check the setting **STATUS : CF Ver** on the front panel of the V6811. If the version is lower than V01.01 then contact Pro-Bel Ltd and a service engineer will perform the upgrade. If the version is V01.01 or above continue with this simple procedure.
2. Copy the mainprog.exe to the Compact Flash card. Do not change the name or extension, and don't copy it to a sub-directory.
3. Power down the VALID generator and insert the Compact Flash with the mainprog.exe into the V6812.
4. Power the VALID generator up and wait for the system to initialise (should take less than 5 seconds).
5. Check the setting **STATUS : CF Ver** on the front panel of the V6811, it should be the correct version for the upgrade you received. If not, try this procedure carefully again with particular attention to step 1 and 2. If the upgrade still fails contact Pro-Bel for assistance.

The mainprog.exe file can be left on the Compact Flash or removed after the upgrade is complete.



## 13. DOCUMENT REVISIONS

---

Version	Release Date	Comments
1.0	23-05-07	First Issue
1.1	21-06-07	Emended references to the maximum number Ident segment to 17
		Added IDENT : ID Auto mode menu and description
		Updated screenshot of VALID8 INI File Generation Utility
		Added Caption Storing & Loading description to Section 6.5
		Added Chapter 10 Initialisation and Error codes
		Removed GPI not implemented yet comment
1.2	19-03-08	Added details of OP BYPAS mode, WSS/VI insertion, and 1kHz continuous Tone functions.
1.3	30-05-08	Changed all Cont-Ton descriptions and references to Tone-Sel.